



Gator Master Cross Reference

March 3rd, 2011

* Note This Page Not Formatted For Printing

Use Ctrl-F to search by Manufacturer or Model Number

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
360Systems	DR600	DigitalAudioGear	G-MULTIFX-1510	GXDF-1116-5-TSA	GXDF-1116-8-TSA		
3M	S15	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
3M	S40	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
3M	S50	Projector	GAV-LTOFFICE				
3M	S55	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
3M	X40	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
3M	X45	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
3M	X50	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
3M	X55	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
3M	X75	Projector	GAV-LTOFFICE				
Access	VIRUSCLASSIC	Keyboard	G-MEDIAPROBPXL				
Access	VIRUSTI61	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Access	VIRUSTIDESKTOP	Keyboard	G-MEDIAPROBPXL				
Access	VIRUSTISNOW	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA			
Adam	SUB10	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Adam	SUB8	Speaker	GPA-600				
AdamAudio	SUB10MKII	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Akai	APC40	DigitalAudioGear	GX-1818-6-TSA	GXDF-1919-7-TSA			
Akai	DPS24-MKII	Mixer	GMIX-3828-8-TSA				
Akai	MPC1000	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Akai	MPC2000XL-MCD	DigitalAudioGear	GX-1818-6-TSA	GXDF-1919-7-TSA			
Akai	MPC2500	DigitalAudioGear	GX-1818-6-TSA	GXDF-1919-7-TSA			
Akai	MPC4000PLUS	DigitalAudioGear	GX-1921-8-TSA	GX-2030-8-TSA	GX-2225-8-TSA	GXDF-1921-8-TSA	GXDF-2030-8-TSA
Akai	MPC500	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA			
Akai	MPC5000	DigitalAudioGear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	
Akai	MPD16	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Akai	MPK25	DigitalAudioGear	G-TOURCARRYONFO				
Akai	MPK49	Keyboard	GKC-1540				
Akai	MPK88	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Akai	PDP4290	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Akai	PDP4294	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Akai	PDP4298ED	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Akai	PDP4298ED1	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
AKG	AS16K12	Mixer	G-MIX-L1224	G-MIX12X24			
AKG	AS8	Mixer	G-MIX-L1224	G-MIX12X24			
AKG	AS8TC	Mixer	G-MIX-L1224	G-MIX12X24			
AKG	IVM 4	Wireless System	G-INEARSYSTEM	GM-1W	GM-1WEVAA	GM-1WP	GM-2W
AKG	WMS40	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	G-INEARSYSTEM
Akira-Neoart	EMP420A/B	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Akira-Neoart	EMP500	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Akira-Neoart	HPT500AW	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Akira-Neoart	SV-4201	LCD/Plasma	G-LCDCOVER-42				
Akira-Neoart	SV-4201H	LCD/Plasma	G-LCDCOVER-42				
Akira-Neoart	SV4202IQ	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Alesis	A6	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Alesis	ANDROMEDA	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Alesis	CDTWINLE	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Alesis	FUSION6HD	Keyboard	GK-49	G-TOUR61	GKC-1540		
Alesis	FUSION8HD	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR88SLIM	
Alesis	iMULTIMIX16USB	Mixer	G-MIX-B2118	G-MIX-L1618A	G-MIX19X21	GMC-2222	
Alesis	iMULTIMIX16USB	Mixer	G-MIX-B2118	G-MIX-L1618A	G-MIX19X21	GMC-2222	
Alesis	iMULTIMIX8USB	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Alesis	ION	Keyboard	GKB-49	GK-49	GKC-1540		
Alesis	MasterControl	DigitalAudioGear	GX-1921-6-TSA	GXDF-1921-6-TSA			
Alesis	MICRON	Keyboard	GK-2110	GK-LT25W			
Alesis	MULTIMIX12FIREWIRE	DigitalAudioGear	GXDF-1919-7-TSA				
Alesis	MULTIMIX12FIREWIRE	Mixer	G-MIX-B1515	G-MIX-B1818	G-MIX-L1618A	G-MIX17X18	
Alesis	MULTIMIX12FX	Mixer	G-MIX-B1515	G-MIX-L1618A	G-MIX17X18	G-TOUR12X17	
Alesis	MULTIMIX12FXD	Mixer	G-MIX-B1515	G-MIX-L1618A	G-MIX17X18	G-TOUR12X17	
Alesis	MULTIMIX12USB	Mixer	G-MIX-B1515	G-MIX-L1618A	G-MIX17X18	G-TOUR12X17	
Alesis	MULTIMIX16FIREWIRE	DigitalAudioGear	GX-1818-6-TSA	GXDF-1919-7-TSA			
Alesis	MULTIMIX16FIREWIRE	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Alesis	MULTIMIX16FXD	Mixer	GMIX-1818-8-TSA	GMIX-1921-8-TSA			
Alesis	MULTIMIX16USB	Mixer	GMIX-1818-8-TSA	GMIX-1921-8-TSA			
Alesis	MULTIMIX16USB2.0	Mixer	GMIX-1818-8-TSA	GMIX-1921-8-TSA			
Alesis	MultiMix4USB	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Alesis	MULTIMIX6FX	Mixer	G-MIX-B1212				
Alesis	MULTIMIX8FIREWIRE	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Alesis	MULTIMIX8FW	Mixer	G-MIX-B1212				
Alesis	MULTIMIX8FX	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Alesis	MULTIMIX8USB	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Alesis	MULTIMIX8USB2.0	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Alesis	PHOTONX25	Keyboard	GK-2110	G-MEDIAPROBPXL			
Alesis	QS6.2	Keyboard	GKB-49	GK-4212	GK-49	GKPE-49-TSA	

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Alesis	QS8.1	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Alesis	QS8.2	Keyboard	GKB-76	GK-76	GKPE-76-TSA	GKPE-88-TSA	G-TOUR76
Alesis	SR16	DigitalAudioGear	G-BROADCASTER	G-MULTIFX-1110			
Alesis	SR-16	DigitalAudioGear	G-BROADCASTER	G-MULTIFX-1110			
Alesis	SR-18	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Alesis	STUDIO24	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Allen&Heath	GL220024	Mixer	GMIX-3828-8-TSA				
Allen&Heath	GL2200-416	Mixer	GMIX-3828-8-TSA				
Allen&Heath	GL240016	Mixer	GMIX-2225-6-TSA				
Allen&Heath	GL240024	Mixer	GMIX-3828-6-TSA	GMIX-3828-8-TSA	G-MIX24X36		
Allen&Heath	GL2400432	Mixer	G-MIX22X46				
Allen&Heath	GL2800-824	Mixer	GMIX-3828-8-TSA				
Allen&Heath	GL3000816	Mixer	GMIX-3828-8-TSA				
Allen&Heath	PA12	Mixer	GMIX-2225-8-TSA				
Allen&Heath	PA12-CP	Mixer	GMIX-2225-8-TSA				
Allen&Heath	PA-20	Mixer	GMIX-3828-8-TSA				
Allen&Heath	PA20-CP	Mixer	GMIX-3828-8-TSA				
Allen&Heath	PA28	Mixer	GMIX-3828-8-TSA				
Allen&Heath	WZ3:12:2	Mixer	GMIX-2225-8-TSA	G-MIX20X25			
Allen&Heath	WZ3:12M	Mixer	GMIX-2225-8-TSA	G-MIX20X25			
Allen&Heath	WZ3:14:4:2	Mixer	GMIX-2225-8-TSA	G-MIX20X25			
Allen&Heath	WZ3:16:2	Mixer	GMIX-2225-8-TSA	G-MIX20X25			
Allen&Heath	WZ3:205	Mixer	GMIX-2225-8-TSA	G-MIX20X25			
Allen&Heath	XONE464	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Allen&Heath	ZED-10	Mixer	G-MIX-B1515	G-MIX-L1618A	G-TOUR12X17		
Allen&Heath	ZED-10FX	Mixer	G-MIX-B1515	G-MIX-L1618A	G-TOUR12X17		
Allen&Heath	ZED-12FX	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Allen&Heath	ZED-14	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Allen&Heath	ZED-22FX	Mixer	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25	G-TOUR20X30
Allen&Heath	ZED-24	Mixer	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25	G-TOUR20X30
Allen&Heath	ZED420	Mixer	GMIX-3828-6-TSA	G-MIX24X36	G-TOUR24X36		
Allen&Heath	ZED428	Mixer	GMIX-3828-6-TSA				
Allen&Heath	ZED-R16	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
AltoAudio	AMX100	Mixer	G-MIX-B0909	G-MIX-B1212			
AltoAudio	AMX100FX	Mixer	G-MIX-B0909	G-MIX-B1212			
AltoAudio	L-12	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
AltoAudio	L-16	Mixer	G-MIX-B2020	G-MIX-B2020	GMIX-2225-6-TSA	GMC-2222	
AltoAudio	L-20	Mixer	G-MIX-B2020	GMIX-2225-6-TSA	G-MIX20X25	GMC-2222	
AltoAudio	L-6	Mixer	G-MIX-B1212				
AltoAudio	L-8	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
AltoAudio	PM-12DRAGONFLY	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
AltoAudio	S-12	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
AltoAudio	S-16	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
AltoAudio	S-6	Mixer	G-MIX-B0909	G-MIX-B1212			
AltoAudio	S-8	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
AmericanAudio	CK-1000	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
AmericanAudio	CK-800	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
AmericanAudio	DLS-15	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
AmericanAudio	DLS-15P	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
AmericanAudio	MX-1400	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
AmericanAudio	PSW-15	Speaker	G-SUB2225-24BAG				
AmericanAudio	PSW-15P	Speaker	G-SUB2225-24BAG				
AmericanAudio	PXI-10P	Speaker	GPA-600				
AmericanAudio	PXI-12P	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
AmericanAudio	PXI-15P	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
AmericanAudio	Q-221	Mixer	G-MIX-B1515	G-MIX-L1618A	G-TOUR12X17		
AmericanAudio	Q-D1	Mixer	G-MIX-B1212				
AmericanAudio	Q-D1MKII	Mixer	G-MIX-B1212				
AmericanAudio	Q-D3	Mixer	G-MIX-B1515	G-MIX-L1618A	G-TOUR12X17		
AmericanAudio	Q-D5	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1015-4-TSA	G-TOUR12X17	
AmericanAudio	Q-D5B	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1015-4-TSA	G-TOUR12X17	
AmericanAudio	Q-D5MKII	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1015-4-TSA	G-TOUR12X17	
AmericanAudio	Q-D6	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1015-4-TSA	G-TOUR12X17	
AmericanAudio	Q-MX2BPM	Mixer	G-MIX-B1212	G-MIX-B1515	G-MIX-L1618A	G-TOUR12X17	
AmericanAudio	XDM-221	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
AmericanAudio	XDM-241	Mixer	G-MIX-B1212				
Ampeg	J20	Amp/Cabinet	G-112A	G-112-ROTO			
Ampeg	SVT450H	Amp/Cabinet	G-112A				
Ampeg	SVTCL	Amp/Cabinet	G-112A				
Ampeg	SVT-CT	Amp/Cabinet	G-112A				
AnchorAudio	BWKII	Mixer	G-MIX-B1515	GMIX-1015-4-TSA			
AnchorAudio	LibertyLIB-7500	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
APC	H10BLK	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Apple	20CINEMADISPLAY	LCD/Plasma	G-TOURLCDP-2023				
Apple	M8893ZM/A	LCD/Plasma	G-TOURLCDP-2023				
Arp	ODYSSEYMKI(2800)	DigitalAudioGear	GX-2030-8-TSA	GX-2225-8-TSA	GXDF-2030-8-TSA	GXDF-2225-8-TSA	
Arturia	ANALOGFACTORY	Keyboard	GK-2110	GK-LT25W	G-MEDIAPROBPXL		
Arturia	Origin	Keyboard	GKB-61	GK-61	GKC-1540		
Ashly	LX308B	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Ashton	BA50	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Ashton	MPA100	Amp/Cabinet	G-112-ROTO				
Audio Technica	ATW2120	Wireless System	GM-1WP	GM-2W	GM-5W	GM-7W-TSA	
Audio Technica	ATW-2129	Wireless System	GM-1WP	GM-2W	GM-5W	GM-7W-TSA	
Audio Technica	ATW-2192-TH	Wireless System	GM-1WP	GM-2W	GM-5W	GM-7W-TSA	
Audio Technica	ATW-251	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Audio Technica	ATW-251/H92-TH	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Audio Technica	ATW-252	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Audio Technica	ATW3131A	Wireless System	GM-1WP	GM-2W			
Audio Technica	ATW3141A	Wireless System	GM-1WP	GM-2W			
Audio Technica	ATW-3192A	Wireless System	GM-1WP	GM-2W			
Audio Technica	ATW-3192A-TH	Wireless System	GM-1WP	GM-2W			
Audio Technica	ATW-701	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Audio Technica	ATW-701 700 Series	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Audio Technica	ATW-701/H92-TH	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Audio Technica	ATW-702	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Audio Technica	M2	Wireless System	G-INEARSYSTEM	GM-1WP	GM-2W	GM-5W	
AudioTechnica	ATM351	Mixer	G-MIX-B1815	G-TOUR12X17			
AudioTechnica	ATMX341A	Mixer	G-MIX-B1212				
Azden	CAM3	Mixer	G-MIX-B0909				
B-52	AT112	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
B-52	LG10012S	Amp/Cabinet	G-212A				
B-52	LG-100A	Amp/Cabinet	G-901				
B-52	LG200AS	Amp/Cabinet	G-901				
B-52	LG7512	Amp/Cabinet	G-112A	G-212A	G-212-ROTO		
B-52	PRODIGY	Mixer	G-MIX20X30				
B-52	PRODIGYFX	Mixer	G-MIX20X30				
B-52	ST6012	Amp/Cabinet	G-212A				
Behringer	B1220PRO	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
Behringer	B1220PRO	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
Behringer	B212	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Behringer	B212A	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Behringer	B212D	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Behringer	B212XL	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Behringer	B215	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
Behringer	B215A	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
Behringer	B215D	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
Behringer	B215XL	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
Behringer	B300ULTRAWAVE	Speaker	G-TOUR2X15-SPKR				
Behringer	B312D	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
Behringer	B812NEO	Speaker	GPA-450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
Behringer	B912NEO	Speaker	GPA-450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
Behringer	BCD2000	Mixer	G-MIX-B1515	G-MIX-L1618A	G-MIX-17X18	G-TOUR12X17	
Behringer	BEDDX3216	Mixer	G-MIX-B2519	GMIX-2030-8-TSA	GMIX-2225-8-TSA	G-MIX20X25	
Behringer	DDM4000	DigitalAudioGear	GX-1818-6-TSA				
Behringer	DDX3216	Mixer	G-MIX-B2519	GMIX-2030-8-TSA	GMIX-2225-8-TSA	G-MIX20X25	
Behringer	DJX400	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Behringer	DJX700	Mixer	G-MIX-B1515	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18
Behringer	DX052	Mixer	G-MIX-B1515	G-MIX-L1618A	G-TOUR12X17		
Behringer	DX2000USB	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	DX626	Mixer	G-MIX-B1212	G-MIX-B1515	G-MIX-L1618A	GMIX-1015-4-TSA	G-TOUR12X17
Behringer	E1220	Speaker	GPA-600	GPA-777			
Behringer	E1520	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
Behringer	EurodeskSX3282	Mixer	G-MIX22X46	GMC-4221			
Behringer	EURORACKUB1202	Mixer	G-MIX-B1212				
Behringer	EURORACKUB2442FXPRO	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	EURORACKUB802	Mixer	G-MIX-B0909	G-MIX-B1212			
Behringer	F1220A	Speaker	GPA-SCVR450-515	GPA-600	GPA-777		
Behringer	K1800FX	Amp/Cabinet	G-112-ROTO				
Behringer	K900FX	Amp/Cabinet	G-112-ROTO				
Behringer	LC2412	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO	GX-1818-6-TSA		
Behringer	LX112	Amp/Cabinet	G-112A	G-212A	G-212-ROTO		
Behringer	MX1604A	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Behringer	MX1804X	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	MX2004A	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	MX2442A	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25	G-TOUR20X30	
Behringer	MX3242X	Mixer	G-MIX-B2123	G-MIX-L1926	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Behringer	MX3282A	Mixer	G-MIX22X46	GMC-4221			
Behringer	MX602A	Mixer	G-MIX-B0909	G-MIX-B1212			
Behringer	MX802A	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Behringer	MX882	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Behringer	MXB1002	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Behringer	PMH1000	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	PMH2000	Mixer	GPA-720				
Behringer	PMH3000	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21	GMC-2222
Behringer	PMH5000	Mixer	GMIX-2030-6-TSA	GMIX-2225-6-TSA	G-MIX20X25	G-MIX20X30	G-TOUR20X30
Behringer	PMH518M	Mixer	G-MIX-B1815	G-MIX-L1224			
Behringer	PMH660M	Mixer	GPA-720				
Behringer	PMH880S	Mixer	GPA-720				
Behringer	PMP1000	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Behringer	PMP1280S	Mixer	GPA-720				
Behringer	PMP1680S	Mixer	GPA-720				
Behringer	PMP2000	Mixer	GPA-720				
Behringer	PMP3000	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21	GMC-2222
Behringer	PMP4000	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21	GMC-2222
Behringer	PMP5000	Mixer	GMIX-2030-6-TSA	GMIX-2225-6-TSA	G-MIX20X25	G-MIX20X30	G-TOUR20X30
Behringer	PMP6000	Mixer	GMIX-2030-6-TSA	GMIX-2225-6-TSA	G-MIX20X25	G-MIX20X30	G-TOUR20X30
Behringer	PMP860M	Mixer	GPA-720				
Behringer	PMP960M	Mixer	GPA-720				
Behringer	PMP980S	Mixer	GPA-720				
Behringer	PMX2000	Mixer	GPA-720				
Behringer	SL2442FX-PRO	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Behringer	SL3242FX-PRO	Mixer	GMC-4221				
Behringer	SX2442FX	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25	G-TOUR20X30	
Behringer	SX3242FX	Mixer	GMC-4221				
Behringer	UB1002	Mixer	G-MIX-B0909	G-MIX-B1212			
Behringer	UB1202	Mixer	G-MIX-B1212				
Behringer	UB1224FX-PRO	Mixer	G-MIX-B1515	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18
Behringer	UB1622FX-PRO	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Behringer	UB1832FX-PRO	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	UB2222FX-PRO	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	UB2442FX-PRO	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	UB502	Mixer	G-MIX-B0909				
Behringer	UB802	Mixer	G-MIX-B0909	G-MIX-B1212			
Behringer	UBB1002	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Behringer	ULTRACOUSTIC ACX1800	Amp/Cabinet	G-112A	G-112-ROTO			
Behringer	ULTRACOUSTIC ACX900	Amp/Cabinet	G-112A	G-112-ROTO			
Behringer	UMX250	Keyboard	GK-2110	G-MEDIAPROBPXL			
Behringer	UMX610	Keyboard	GK-4212				
Behringer	V-AMPIRE LX1200H	Amp/Cabinet	G-901				
Behringer	VMX100	Mixer	G-MIX-B1212				
Behringer	VMX1000	Mixer	G-MIX-L1224	G-MIX12X24			
Behringer	VMX200	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Behringer	VMX300	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Behringer	VP1220	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	
Behringer	VP1220D	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	
Behringer	VP1220F	Speaker	GPA-777				
Behringer	VP1800S	Speaker	G-SUB2225-24BAG				
Behringer	VS1220	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	
Behringer	VS1220F	Speaker	GPA-777				
Behringer	V-TONE GMX1200H	Amp/Cabinet	G-901				
Behringer	V-TONE GMX210	Amp/Cabinet	G-112A	G-212A	G-212-ROTO		
Behringer	V-TONE GMX212	Amp/Cabinet	G-212A				
Behringer	X1222USB	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Behringer	X1622USB	Mixer	G-MIX-B1515	G-MIX-B1818	G-MIX-L1618A	G-MIX17X18	
Behringer	X1832USB	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	X2222USB	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	X2442USB	Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	XENYX1002	Mixer	G-MIX-B0909	G-MIX-B1212			
Behringer	Xenyx1002B	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Behringer	XENYX1002FX	Mixer	G-MIX-B0909	G-MIX-B1212			
Behringer	XENYX1202	Mixer	G-MIX-B1212				
Behringer	XENYX1202FX	Mixer	G-MIX-B1212				
Behringer	XENYX1204	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Behringer	XENYX1204FX	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Behringer	XENYX1222FX	Mixer	G-MIX-B1515	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18
Behringer	XENYX1622FX	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Behringer	XENYX1832FX	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	XENYX2222FX	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	XENYX2442FX	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Behringer	XENYX502	Mixer	G-MIX-B0909				
Behringer	XENYX802	Mixer	G-MIX-B0909	G-MIX-B1212			
Behringer	XENYX-XL1600	Mixer	GMIX-2030-8-TSA	GMIX-2225-8-TSA	G-MIX20X25		
Behringer	XENYX-L2400	Mixer	GMIX-3828-8-TSA				
Behringer	XENYX-XL3200	Mixer	GMIX-3828-8-TSA				
Behringer	XL2400	Mixer	GMIX-3828-8-TSA				
Behringer	XV-AMP	DigitalAudioGear	G-MULTIFX-1110				
Belkin	TUNESTUDIO	Mixer	GMIX-1818-8-TSA	G-MIX17X18			
Benchmark	DAC1C	DigitalAudioGear	G-MULTIFX-1110				
BenjaminAdams	CK62	Keyboard	GKB-61	GK-61	GKC-1540		
BenQ	MP727	Projector	GAV-LTOFFICE				
BenQ	MP776ST	Projector	GAV-LTOFFICE				
BenQ	MP776ST	Projector	GAV-LTOFFICE				
BenQ	MP777	Projector	GAV-LTOFFICE				
BenQ	MP777	Projector	GAV-LTOFFICE				
BenQ	PB2140	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
BenQ	PB2240	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
BenQ	PB6100	Projector	GAV-LTOFFICE				
BenQ	PB6200	Projector	GAV-LTOFFICE				

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
BenQ	PB6-200	Projector	GAV-LTOFFICE				
BenQ	PB7110	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
BenQ	PB7200	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
BenQ	PB7210	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
BenQ	PB7230	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
BenQ	PB8220	Projector	GAV-LTOFFICE				
BenQ	PE5120	Projector	GAV-LTOFFICE				
BenQ	SP820	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
BenQ/Acer	859	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
BenQ/Acer	46W1	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
BlueSky	SUB-12	Speaker	GPA-777	G-SUB2225-24BAG			
BlueSky	SUB15	Speaker	G-SUB2225-24BAG				
BlueSky	SUB-8	Speaker	GPA-600				
Bogner	ALCHEMIST HEAD	Amp/Cabinet	G-901				
Bogner	Alchemist Series 112	Amp/Cabinet	G-212A				
Bogner	CAB 1120	Amp/Cabinet	G-112-ROTO	G-212-ROTO			
Bogner	CUSTOM SHOP DUENDE HEAD	Amp/Cabinet	G-901				
Bogner	CUSTOM SHOP ECSTASY 101	Amp/Cabinet	G-901				
Bogner	CUSTOM SHOP SHIVA HEAD	Amp/Cabinet	G-901				
Bonger	DUENDE110	Amp/Cabinet	G-212A				
Bonger	DUENDE112-15	Amp/Cabinet	G-212A				
Bonger	SHIVA112RV	Amp/Cabinet	G-212A				
Bose	B1	Speaker	GPA-600				
Bose	T1ToneMatch	Mixer	G-MIX-B0909	G-MIX-B1212			
Boss	AD-8	DigitalAudioGear	G-MULTIFX-1110				
Boss	BR1180CD	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Boss	BR-600	DigitalAudioGear	G-MULTIFX-1110		GXDF-1116-5-TSA		
Boss	BR-864	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Boss	BR-900CD	DigitalAudioGear	G-MULTIFX-1510	G-TOURCARRYONFO	GX-1015-4-TSA	GXDF-1116-5-TSA	
Boss	DD-20	DigitalAudioGear	G-MULTIFX-1110				
Boss	DR-3	DigitalAudioGear	G-MULTIFX-1110				
Boss	DR-670	DigitalAudioGear	G-MULTIFX-1110				
Boss	DR-880	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Boss	GS-10	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Boss	GT-10	DigitalAudioGear	G-MULTIFX-2411				
Boss	GT-10B	DigitalAudioGear	G-MULTIFX-2411				
Boss	GT-10B	DigitalAudioGear	G-MULTIFX-2411				
Boss	GT-3	DigitalAudioGear	G-MULTIFX-1110				
Boss	GT-6	DigitalAudioGear	G-MULTIFX-2411				
Boss	GT-6B	DigitalAudioGear	G-MULTIFX-2411				
Boss	GT-8	DigitalAudioGear	G-MULTIFX-2411				
Boss	ME-20	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Boss	ME-50	DigitalAudioGear	G-MULTIFX-1510	G-TOURCARRYONFO	GXDF-1116-5-TSA		
Boss	ME-50B	DigitalAudioGear	G-MULTIFX-1510	G-TOURCARRYONFO	GXDF-1116-5-TSA		
Boss	ME-70	DigitalAudioGear	G-MULTIFX-1510	G-TOURCARRYONFO	GXDF-1116-5-TSA		
Boss	SP-505	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Boxlight	7200	LCD/Plasma	G-LCD-4647	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Boxlight	PD4600	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Budda	SUPERDRIVE 18	Amp/Cabinet	G-112-ROTO	G-212-ROTO			
Bugera	333	Amp/Cabinet	G-901				
Bugera	1960	Amp/Cabinet	G-901				
Bugera	1990	Amp/Cabinet	G-901				
Bugera	6260	Amp/Cabinet	G-901				
Bugera	6262	Amp/Cabinet	G-901				
Bugera	212V-BK	Amp/Cabinet	G-212A				
Bugera	333-212	Amp/Cabinet	G-212A				
Bugera	333XL	Amp/Cabinet	G-901				
Bugera	333XL-212	Amp/Cabinet	G-212A				
Bugera	6260-212	Amp/Cabinet	G-212A				
Bugera	6262-212	Amp/Cabinet	G-212A				
Bugera	BC30-212	Amp/Cabinet	G-212A				
Bugera	V22	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Cakewalk	VStudio100	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Califone	1005AV	DigitalAudioGear	GX-1818-8-TSA	GXDF-1919-9-TSA			
Canon	LV-5220	Projector	GAV-LTOFFICE				
Canon	LV-7220	Projector	GAV-LTOFFICE				
Canon	LV-7225	Projector	GAV-LTOFFICE				
Canon	LV-7230	Projector	GAV-LTOFFICE				
Canon	LV-S3	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Canon	LV-S4	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Canon	LV-X4	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Canon	REALISSX-50	Projector	GAV-LTOFFICE				
CarlMartin	QUATTRO	DigitalAudioGear	G-MULTIFX-2411				
Carlsbro	COLT 40	Amp/Cabinet	G-112-ROTO				
Carlsbro	COLT 85	Amp/Cabinet	G-112-ROTO				
Carlsbro	DX8-2XP	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Carlsbro	EM12	Speaker	G-TOUR2X12-SPKR				

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Carlsbro	PM12	Speaker	G-TOUR2X12-SPKR				
Carvin	DX1642	Mixer	GMIX-3828-6-TSA				
Carvin	DX2442	Mixer	GMIX-3828-6-TSA	G-MIX24X36	G-TOUR24X36		
Carvin	LM15A	Speaker	G-TOUR2X15-SPKR				
Casio	XJ-A240	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Casio	XJ-SC215-W	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Casio	140	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Casio	140S	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Casio	CDP-100	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
Casio	CTK-2000	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Casio	CTK-2100	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Casio	CTK-230	Keyboard	GKB-49	GKPE-49-TSA	GKC-1540		
Casio	CTK3000	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Casio	CTK4000	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Casio	CTK-496	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Casio	CTK5000	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Casio	CTK-691	Keyboard	GKB-61	GKPE-61-TSA	G-TOUR61	GKC-1540	
Casio	CTK710	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Casio	CTK800	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Casio	CTK810	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Casio	CTK900	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Casio	LK100	Keyboard	GK-4212	GK-49	GKC-1540		
Casio	LK-200S	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Casio	LK-220	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Casio	LK-230	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Casio	LK-270	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Casio	LK-300TV	Keyboard	GKB-61	GKPE-61-TSA	G-TOUR61	GKC-1540	
Casio	LK94	Keyboard	GKPE-61-TSA	G-TOUR61	GKC-1540		
Casio	P70	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Casio	P70S	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Casio	PS20	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Casio	PX-100	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
Casio	PX110	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
Casio	PX-120	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
Casio	PX-130	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
Casio	PX-200	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
Casio	PX-3	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
Casio	PX-300	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
Casio	PX-320	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
Casio	PX-330	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
Casio	PX-400R	Keyboard	GKPE-88-TSA				
Casio	PX500L	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
Casio	PX-575R	Keyboard	GKPE-88-TSA				
Casio	SA76	Keyboard	GK-LT25W				
Casio	WK-110	Keyboard	GKB-76	GK-76	G-TOUR76	GKC-1648	
Casio	WK-1300	Keyboard	GKPE-76D-TSA	GKC-1648			
Casio	WK-200	Keyboard	GKB-76	GK-76	GKC-1648		
Casio	WK-210	Keyboard	GKB-76	GK-76	GKC-1648		
Casio	WK-3000	Keyboard	GKC-1648				
Casio	WK3200	Keyboard	GKPE-88-TSA	GKC-1648			
Casio	WK-3300	Keyboard	GKPE-88-TSA	GKC-1648			
Casio	WK-3500	Keyboard	GKC-1648				
Casio	WK3700	Keyboard	GKPE-88-TSA	GKC-1648			
Casio	WK-3800	Keyboard	GKPE-88-TSA	GKC-1648			
Casio	WK500	Keyboard	GKB-76	GK-76	GKC-1648		
Casio	WK8000	Keyboard	GKC-1648				
Casio	XJ-560	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Casio	YPG-225	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Casio	YPG-525	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR88	GKC-1648
Casio	YPG-625	Keyboard	GKPE-88-TSA	G-TOUR88	GKC-1648		
CerwinVega	CLS-155	Speaker	G-SUB2225-24BAG				
CerwinVega	CVA-115X	Speaker	G-SUB2225-24BAG				
CerwinVega	CVA-118	Speaker	G-SUB2225-24BAG				
CerwinVega	CVA-118X	Speaker	G-SUB2225-24BAG				
CerwinVega	CVA-28X	Speaker	GPA-450-515	G-TOUR2X12-SPKR			
CerwinVega	CVP-118X	Speaker	G-SUB2225-24BAG				
CerwinVega	HT2510	Speaker	GPA-600				
CerwinVega	HTS-10	Speaker	GPA-600				
CerwinVega	HTS15A	Speaker	G-SUB2225-24BAG				
CerwinVega	LW10	Speaker	GPA-600				
CerwinVega	LW15	Speaker	GPA-777	G-SUB2225-24BAG			
CerwinVega	PSX-36	Speaker	G-SUB2225-24BAG				
CerwinVega	SUB15MKII	Speaker	G-SUB2225-24BAG				
Champion	42CV1	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Cicognani	H150	Amp/Cabinet	G-901				
Clavia	G2X	Keyboard	GK-4212	GKC-1540			
Clavia	NORDELECTRO261	Keyboard	GKB-49	GK-4212	GK-49	GKPE-49-TSA	GKC-1540
Clavia	NORDELECTRO61	Keyboard	GKB-49	GK-4212	GK-49	GKPE-49-TSA	GKC-1540
Clavia	NORDLEAD2	Keyboard	GKB-49	GK-4212	GK-49		
Clavia	NORDLEAD2X	Keyboard	GKB-49	GK-4212	GK-49	GKPE-49-TSA	

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Clavia	NORDLEAD3	Keyboard	GKB-49	GK-4212	GK-49	GKPE-49-TSA	
Clavia	NORDMODULARG2X	Keyboard	GK-4212	GKC-1540			
Clavia	NORDSTAGE76	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	
Clavia	NORDSTAGE88	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Clavia	RACK2X	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Clavia	RACK3	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
CME	UF5	Keyboard	GK-49	GK-1540			
CME	UF50	Keyboard	GKB-49	GK-49	GKC-1540		
CME	UF6	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
CME	UF60	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
CME	UF7	Keyboard	GKB-76	GK-76	GKPE-76-TSA	GKPE-88-TSA	G-TOUR76
CME	UF70	Keyboard	GKB-76	GK-76	GKPE-76-TSA	GKPE-88-TSA	G-TOUR76
CME	UF8	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
CME	UF80	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Community	R.5SUB	Speaker	GPA-600				
Community	SBS12	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
CooperSound	SYSTEM6	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
CooperSound	SYSTEM8	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Cortex	DMIX-300	Mixer	G-MIX-L1224	G-MIX-L1618A	G-MIX-L1622	G-MIX12X24	GMC-2222
Cortex	DMIX-600	Mixer	G-MIX-L1224	G-MIX-L1618A	G-MIX-L1622	G-MIX12X24	GMC-2222
Crate	BV150HB	Amp/Cabinet	G-901				
Crate	BV6212	Amp/Cabinet	G-212A				
Crate	CA125DG	Amp/Cabinet	G-112A	G-112-ROTO			
Crate	CSX-12	Mixer	GMIX-2225-6-TSA				
Crate	CSX-16	Mixer	G-MIX24X36	G-TOUR24X36			
Crate	FW120H	Amp/Cabinet	G-901				
Crate	GLX1200H	Amp/Cabinet	G-901				
Crate	GLX50	Amp/Cabinet	G-112-ROTO				
Crate	GLX65	Amp/Cabinet	G-112-ROTO				
Crate	GT112SL	Amp/Cabinet	G-212A	G-212-ROTO			
Crate	GT1200H	Amp/Cabinet	G-901				
Crate	GT212	Amp/Cabinet	G-212A	G-212-ROTO			
Crate	GT30	Amp/Cabinet	G-112-ROTO				
Crate	GT3500H	Amp/Cabinet	G-901				
Crate	GT65	Amp/Cabinet	G-112A	G-112-ROTO			
Crate	GTX212	Amp/Cabinet	G-212A	G-212-ROTO			
Crate	GTX65	Amp/Cabinet	G-112A	G-112-ROTO			
Crate	PA8FX	Mixer	GPA-720				
Crate	PX700DLX	Mixer	GPA-720				
Crate	V18-112	Amp/Cabinet	G-112A	G-212A	G-212-ROTO		
Crate	V18-212	Amp/Cabinet	G-212A				
Crate	V212T	Amp/Cabinet	G-212A				
Crate	V3112	Amp/Cabinet	G-112A	G-112-ROTO			
Crate	V-33	Amp/Cabinet	G-212A				
Crate	VFX5112	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Crate	VFX5212	Amp/Cabinet	G-212A				
Crate	VTX2005	Amp/Cabinet	G-212A				
Crate	VTX212B	Amp/Cabinet	G-212A				
Crate	VTX350 HEAD	Amp/Cabinet	G-901				
Crate	VTX65B	Amp/Cabinet	G-112A	G-112-ROTO			
Crate	XT12OR	Amp/Cabinet	G-212A	G-212-ROTO			
Creative	PRODIKEYS	Keyboard	GK-2110	GK-LT25W			
Creative-Labs	PROKEYSPD-MIDI	Keyboard	GK-2110	GK-LT25W			
CrestAudio	XR20	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
CrestAudio	XR24	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
CrestAudio	XRM	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Daewoo	DP-425M	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Daewoo	DSP-4210GM	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Daewoo	PD-42520W	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Daewoo	PPM-4253	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
DaveSmith	EVOLVERDESKTOP	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA			
DaveSmith	POLYEVOLVERKEYBOARD	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
DaveSmith	POLYEVOLVERRACK	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
DaveSmith	PROPHET08	Keyboard	GKB-49	GK-49	GKPE-49-TSA	GKC-1540	
DBTechnologies	OPERALIVE402	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
Dell	W4200	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Delphi	DD42EVOLUTION	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Delphi	DD42PANACHE	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Delphi	PRO42EVOLUTION	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Delphi	PRO42PANACHE	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
DeltaLab	DGFX1	DigitalAudioGear	G-MULTIFX-1510	GXDF-1116-5-TSA			
Denon	DN-X100	Mixer	G-MIX-B1212				
Denon	DNX1100	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Denon	DN-X1500	Mixer	G-MIX-B1515	G-MIX-B1818	G-MIX-L1618A		
Denon	DN-X1500S	Mixer	G-MIX-L1224	G-MIX12X24			
Denon	DN-X300	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Digidesign	003FACTORYCONTROLSU	DigitalAudioGear	GX-2225-6-TSA	GXDF-2225-6-TSA			
Digidesign	RFACE	DigitalAudioGear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	
Digidesign	COMMAND8	DigitalAudioGear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Digidesign	DIGI002	DigitalAudioGear	GX-1921-8-TSA	GX-2225-8-TSA	GXDF-1919-7-TSA	GXDF-1921-8-TSA	GXDF-2225-8-TSA
Digidesign	DIGI-003	DigitalAudioGear	GX-2225-6-TSA	GXDF-2225-6-TSA			
Digidesign	MBOX2	DigitalAudioGear	G-BROADCASTER	G-MULTIFX-1110			
Digidesign	MBOX2PRO	DigitalAudioGear	G-MULTIFX-1110		GX-1015-4-TSA	GXDF-1116-5-TSA	
Digitech	BP200	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Digitech	BP355	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Digitech	BP80	DigitalAudioGear	G-BROADCASTER	G-MULTIFX-1110			
Digitech	BP90	DigitalAudioGear	G-BROADCASTER	G-MULTIFX-1110			
Digitech	Control2	DigitalAudioGear	G-MULTIFX-2411				
Digitech	GNX1	DigitalAudioGear	G-MULTIFX-1510	G-TOURCARRYONFO	GX-1015-4-TSA	GXDF-1116-5-TSA	
Digitech	GNX2	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Digitech	GNX3	DigitalAudioGear	G-MULTIFX-2411				
Digitech	GNX3000	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Digitech	GNX4	DigitalAudioGear	G-MULTIFX-2411				
Digitech	HarmonyMan	DigitalAudioGear	G-MULTIFX-1110				
Digitech	JamManDelay	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA			
Digitech	Live2	DigitalAudioGear	G-MULTIFX-1110				
Digitech	Live3	DigitalAudioGear	G-MULTIFX-1110				
Digitech	Live4	DigitalAudioGear	G-MULTIFX-1510	G-TOURCARRYONFO	GX-1015-4-TSA	GXDF-1116-5-TSA	
Digitech	Live5	DigitalAudioGear	G-MULTIFX-1510	G-TOURCARRYONFO	GX-1015-4-TSA	GXDF-1116-5-TSA	
DigiTech	RG335	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Digitech	RP-1000	DigitalAudioGear	G-MULTIFX-2411				
Digitech	RP150	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Digitech	RP155	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Digitech	RP250	DigitalAudioGear	G-MULTIFX-1110				
DigiTech	RP255	DigitalAudioGear	G-MULTIFX-1510	G-TOURCARRYONFO	GX-1015-4-TSA	GXDF-1116-5-TSA	
Digitech	RP350	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Digitech	RP355	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Digitech	RP500	DigitalAudioGear	G-MULTIFX-2411				
Digitech	RP90	DigitalAudioGear	G-BROADCASTER	G-MULTIFX-1110			
Digitech	TimeBender	DigitalAudioGear	G-MULTIFX-1110				
Digitech	VL2	DigitalAudioGear	G-MULTIFX-1110				
Digitech	VL4	DigitalAudioGear	G-MULTIFX-1510	G-TOURCARRYONFO	GX-1015-4-TSA	GXDF-1116-5-TSA	
Digitech	VOCAL300	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Digitech	WHAMMY	DigitalAudioGear	G-MULTIFX-1110				
Dr. Z	Maz 18 Jr. 1x12	Amp/Cabinet	G-112-ROTO	G-212-ROTO			
Dr. Z	Maz 18 Jr. 2x10	Amp/Cabinet	G-112-ROTO	G-212-ROTO			
Dr. Z	Maz 18 Jr. 2x12	Amp/Cabinet	G-212A				
Dr. Z	Maz 38	Amp/Cabinet	G-212A				
Dynaudio	BM14S	Speaker	GPA-600				
Dynaudio	BM15A	Speaker	GPA-600				
Dynaudio	BM15P	Speaker	GPA-600				
Dynex	DX-L42-10A	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
EAW	FR129Z	Speaker	GPA-SCVR450-515	GPA-600	GPA-777		
EAW	FR153Z	Speaker	G-SUB2225-24BAG				
EAW	SB120ZP	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
EAW	SB150Z	Speaker	G-SUB2225-24BAG				
EAW	SB180ZP	Speaker	G-SUB2225-24BAG				
EAW	SM109Z	Speaker	GPA-600				
EAW	SM159Z	Speaker	G-SUB2225-24BAG				
Edirol	M-100FX	DigitalAudioGear	GXDF-1116-5-TSA				
Edirol	M10DX	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Edirol	M-10DX	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Edirol	M-10E	DigitalAudioGear	G-MULTIFX-1110				
Edirol	M16DX	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Edirol	M-16DX	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Edirol	PCR-1	Keyboard	GK-2110	G-MEDIAPROBPXL			
Edirol	PCR500	Keyboard	GK-4212	GKPE-49-TSA			
Edirol	PCR800	Keyboard	GK-4212				
Edirol	PCR-M1	Keyboard	GK-2110	G-MEDIAPROBPXL			
Edirol	PCR-M50	Keyboard	GK-4212	GKPE-49-TSA			
Edirol	PCR-M80	Keyboard	GK-4212				
Edirol	R-44	DigitalAudioGear	G-MULTIFX-1110				
Edirol	UA101	DigitalAudioGear	G-BROADCASTER	G-MULTIFX-1110			
Edirol	UA-700	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Edirol	UM-550	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Edirol	UR-80	DigitalAudioGear	G-MULTIFX-1510	G-TOURCARRYONFO	GXDF-1116-5-TSA		
Edirol	V-4	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Egnater	Tourmaster Series 4212	Amp/Cabinet	G-212A				
Eiki	LC-XB28	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Eiki	PLD-42UE	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Eiki	PLD-42XU	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Eizo	P5070	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Eizo	P5071	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Electrograph	DT542	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52		
Electrograph	DT542DD	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Electrograph	E4203DD	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
ElectroHarmonix	HolyStain	DigitalAudioGear	G-MULTIFX-1110				
ElectroHarmonix	XOHOLYSTAIN	DigitalAudioGear	G-MULTIFX-1110				
ElectroVoice	FORCE12"	Speaker	G-TOUR2X12-SPKR				

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
ElectroVoice	SB112	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
ElectroVoice	SBA760	Speaker	G-SUB2225-24BAG				
ElectroVoice	SX100	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
ElectroVoice	SX250	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
ElectroVoice	SxA360	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
Electro-Voice	ELX112	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
Electro-Voice	ELX115	Speaker	G-TOUR2X15-SPKR				
Electro-Voice	ELX118	Speaker	G-SUB2225-24BAG				
Electro-Voice	RE2	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Electro-Voice	RE2 Handheld	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Elektron	MachinedrumSPS-1UWMKII	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA			
Emes	AMBER	Speaker	GPA-600				
E-MU	0404USB	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
E-MU	XBOARD25	Keyboard	GK-2110	G-MEDIAPROBPXL			
E-MU	XBOARD49	Keyboard	GKPE-49-TSA				
E-MU	XBOARD61	Keyboard	GK-4212				
Engl	Raider100	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Envision	A42W64	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Epiphone	BLUES CUSTOM 30	Amp/Cabinet	G-212A				
Epson	730	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Epson	760	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Epson	730C	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Epson	73C	Projector	GAV-LTOFFICE				
Epson	EX71WXGA	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Epson	EX90	Projector	GAV-LTOFFICE				
Epson	PowerLite1715C	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Epson	PowerLite1825	Projector	GAV-LTOFFICE				
Epson	PowerLite400W	Projector	GAV-LTOFFICE				
Epson	PowerLite732C	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Epson	PowerLite737C	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Epson	PowerLite740C	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Epson	PowerLite745C	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Epson	S3	Projector	GAV-LTOFFICE				
Espon	EX100	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Espon	PowerLiteV11H228020	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
FBT	JOLLY12RA	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
FBT	JOLLYSUB12A	Speaker	G-SUB2225-24BAG				
FBT	MAXX2	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
FBT	MAXX4	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
FBT	MAXX4a	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
FBT	MAXX9SA	Speaker	G-SUB2225-24BAG				
FBT	VERVE18S	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
Fender	57 AMP LTD	Amp/Cabinet	G-112A	G-112-ROTO			
Fender	57 DELUXE	Amp/Cabinet	G-112A	G-112-ROTO			
Fender	57 TWIN	Amp/Cabinet	G-212A	G-212-ROTO			
Fender	64 Vibroverb	Amp/Cabinet	G-212A	G-212-ROTO			
Fender	65 DELUXE REVERB	Amp/Cabinet	G-112A	G-212-ROTO			
Fender	65 PRINCETON REVERB	Amp/Cabinet	G-112-ROTO				
Fender	65 TWIN REVERB	Amp/Cabinet	G-212A	G-212-ROTO			
Fender	ACOUSTASONIC JR	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Fender	Band-Master VM	Amp/Cabinet	G-901				
Fender	BASSMAN 300	Amp/Cabinet	G-212-ROTO				
Fender	BLONDE HOT ROD DELUXE	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Fender	BLUES DELUXE	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Fender	CYBER TWIN	Amp/Cabinet	G-212-ROTO				
Fender	DELUXE 900	Amp/Cabinet	G-112A	G-112-ROTO			
Fender	DUAL PROFESSIONAL	Amp/Cabinet	G-212A	G-212-ROTO			
Fender	FM 100H	Amp/Cabinet	G-901				
Fender	FM 212R	Amp/Cabinet	G-212A	G-212-ROTO			
Fender	FM210R	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Fender	FM212 DSP	Amp/Cabinet	G-212A	G-212-ROTO			
Fender	FRONTMAN 212R	Amp/Cabinet	G-212A	G-212-ROTO			
Fender	HOT ROD DELUXE	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Fender	HOT ROD DEVILLE 212	Amp/Cabinet	G-212A	G-212-ROTO			
Fender	MH500	Amp/Cabinet	G-901				
Fender	Mustang III	Amp/Cabinet	G-112A	G-112-ROTO			
Fender	Mustang IV	Amp/Cabinet	G-212A				
Fender	Mustang V Head	Amp/Cabinet	G-901				
Fender	PROSONIC HEAD	Amp/Cabinet	G-901				
Fender	ROC PRO 700	Amp/Cabinet	G-112A	G-112-ROTO			
Fender	STAGE 1000	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Fender	STAGE 1600	Amp/Cabinet	G-212A	G-212-ROTO			
Fender	SUPER SONIC HEAD	Amp/Cabinet	G-901				
Fender	SUPER-SONIC 112	Amp/Cabinet	G-212-ROTO				
Fender	TONE MASTER HEAD	Amp/Cabinet	G-901				
Fender	ULTIMATE CHORUS	Amp/Cabinet	G-212A	G-212-ROTO			
Fender	VIBRO KING	Amp/Cabinet	G-212A				
Fender	VIBRO KING 212	Amp/Cabinet	G-212A				

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Fender	VIBRO KING 3 10	Amp/Cabinet	G-212A				
Fishman	Loud Box	Amp/Cabinet	G-112-ROTO				
Fostex	FR2	DigitalAudioGear	G-MULTIFX-1110				
Fostex	FR-2	DigitalAudioGear	G-MULTIFX-1110				
Fostex	FR2TC	DigitalAudioGear	G-MULTIFX-1110				
Fostex	LR-16	Mixer	G-MIX-B2123	G-MIX-L1926	GMIX-2030-6-TSA	GMIX-2225-6-TSA	G-MIX20X25
Fostex	MR-16HD	DigitalAudioGear	GX-1921-8-TSA	GXDF-1919-7-TSA	GXDF-1921-8-TSA		
Fostex	MR-16HD/CD	DigitalAudioGear	GX-1921-8-TSA	GXDF-1919-7-TSA	GXDF-1921-8-TSA		
Fostex	MR-8	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Fostex	MR8-8MK11	Mixer	G-MIX-B1515	G-MIX-L1618A	G-TOUR12X17		
Fostex	MR-8HD	DigitalAudioGear	G-MULTIFX-1510	GXDF-1116-5-TSA			
Fostex	MR8HDCD	DigitalAudioGear	G-MULTIFX-1510	GXDF-1116-5-TSA			
Fostex	MR8MKII	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Fostex	VF160	DigitalAudioGear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	
Fostex	VF160EX	DigitalAudioGear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	
Fostex	VF80	DigitalAudioGear	G-MULTIFX-1510	GXDF-1116-5-TSA			
Fostex	VF80EX	DigitalAudioGear	G-MULTIFX-1510	GXDF-1116-5-TSA			
Fostex	X12	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
FrontierDesign	ALPHATRACK	Mixer	G-MIX-B1212				
Fujitsu	P42HHA10	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Fujitsu	P42VHA10	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Fujitsu	P50XHA10	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Fujitsu	PDS-4201	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Fujitsu	PDS-4203	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Fujitsu	PDS-4204	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Fujitsu	PDS-4207	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Fujitsu	PDS-4208	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Fujitsu	PDS-4209	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Fujitsu	PDS-4210	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Fujitsu	PDS-4211	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Fujitsu	PDS-4212	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Fujitsu	PDS-4213	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Fujitsu	PDS-4214	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Fujitsu	PDS-4221	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Fujitsu	PDS-4222	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Fujitsu	PDS-4233	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Fujitsu	PDS-5001	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Galaxy	AS-1100	Wireless System	G-INEARSYSTEM	GM-4WR			
Galaxy	AS-1106	Wireless System	G-INEARSYSTEM	GM-4WR			
Galaxy	AS-1500	Wireless System	G-INEARSYSTEM				
Galaxy	AS-900	Wireless System	G-INEARSYSTEM	GM-4WR			
Galaxy	AS-ALS-4	Wireless System	GM-1WP	GM-2W	GM-7W-TSA		
Gateway	42ED&42HD	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Gateway	50ED&50HD	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Gateway	GTW-P42M102	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Gateway	GTW-P42M103	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Gateway	GTW-P46M103	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Gemini	iTRAX	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Gemini	MMSERIES	Mixer	G-MIX-L1224	G-MIX12X24			
Gemini	PDMSERIES	Mixer	G-MIX-L1224	G-MIX12X24			
Gemini	PMXSERIES	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Gemini	PSSERIES	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Genelec	7050B	Speaker	GPA-600				
Genelec	7070A	Speaker	G-SUB2225-24BAG				
Genelec	7270A	Speaker	G-SUB2225-24BAG				
GeneralMusic	S2	Keyboard	GKC-1648				
Gibson	Super Goldtone GA30RV	Amp/Cabinet	G-212A				
Haier	HL47E	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52			
Hammond	XK-1	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	
Hammond	XK-2	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Hammond	XK-3	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Hammond	XK-3C	Keyboard	GKC-1648				
Hammond	XM2	DigitalAudioGear	G-MULTIFX-2411				
HenryEngineering	MICROMIXER	Mixer	G-MIX-B0909				
HenryEngineering	STEREOMIXER	Mixer	G-MIX-B0909				
Hercules	DJCONSOLEMK2	Mixer	G-MIX-B1212				
Hercules	DJConsoleRmxController	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	
Hercules	RMX	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	
Hewlett-Pckrd	PPL-4245N	LCD/Plasma	G-LCD-4042	G-TOURLCDLIFT52			
Hitachi	401XU	LCD/Plasma	G-TOURLCDLIFT52				
Hitachi	402HDE	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Hitachi	402HDU	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Hitachi	4120HDU	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Hitachi	42PMA500E	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Hitachi	CMP4201U	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Hitachi	CMP4202U	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Hitachi	CMP4211U	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Hitachi	CMP-5000	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Hitachi	CP-RS55	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Hitachi	CP-S235W	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA			
Hitachi	CP-S318	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Hitachi	CP-S335	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Hitachi	CP-X275	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Hitachi	CP-X3010	Projector	GAV-LTOFFICE				
Hitachi	CP-X340	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Hitachi	CP-X345	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Hitachi	CP-X401	Projector	GAV-LTOFFICE				
Hitachi	CP-X443	Projector	GAV-LTOFFICE				
Hitachi	CP-X445W	Projector	GAV-LTOFFICE				
Hitachi	UT47V702	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
HP	LD4200tm	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Hughes & Kettner	MATRIX 100	Amp/Cabinet	G-901				
Hughes & Kettner	PURETONE	Amp/Cabinet	G-901				
Hughes & Kettner	SWITCHBLADE 100 2X12	Amp/Cabinet	G-212A	G-212-ROTO			
Hughes & Kettner	SWITCHBLADE 100 HEAD	Amp/Cabinet	G-901				
Hughes & Kettner	SWITCHBLADE 50	Amp/Cabinet	G-212-ROTO				
Hughes & Kettner	WARP X	Amp/Cabinet	G-901				
Ibanez	TB100H	Amp/Cabinet	G-901				
Ibanez	TBX150H	Amp/Cabinet	G-901				
Ibanez	TBX150R	Amp/Cabinet	G-212A	G-212-ROTO			
Ibanez	TBX65R	Amp/Cabinet	G-112-ROTO				
Infocus	IN24	Projector	GAV-LTOFFICE				
Infocus	LP530	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Infocus	LP600	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Insignia	NS-L37Q-10A	LCD/Plasma	G-LCDCOVER-42				
Insignia	NS-L42Q-10A	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Insignia	NS-L55X-10A	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			
Insignia	NS-LCD32-09	LCD/Plasma	G-TOURLCDP-2632				
Insignia	NS-LCD37-09	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Insignia	NS-LCD47HD-09	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Insignia	NS-P42Q10A	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52		
Insignia	NS-P501Q-10A	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Insignia	NS-P502Q-10A	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Inter-M	A120	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Inter-M	A60	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Inter-M	CA8320	Mixer	GPA-720				
Inter-M	MX1243	Mixer	G-MIX-B2118	G-MIX-L1618A	G-MIX-L1622	G-MIX-L1822	G-MIX19X21
Inter-M	PA1000B	Mixer	G-MIX-B1212				
Inter-M	PA1000BR	Mixer	G-MIX-B1212				
Inter-M	PA2000	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Inter-M	PA4000	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Inter-M	PA920	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Inter-M	PA935	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Inter-M	PAM120	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Inter-M	PAM60	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Inter-M	PAMCDA	Mixer	G-MIX-B0909	G-MIX-B1212			
Inter-M	PAMD	Mixer	G-MIX-B0909	G-MIX-B1212			
Inter-M	PMC-05PROD	Mixer	G-MIX-B1515	G-MIX-L1618A	G-TOUR12X17		
Inter-M	RMX1426	Mixer	G-MIX-B2118	G-MIX-L1618A	G-MIX19X21	GMC-2222	
Inter-M	SFX8460	Mixer	GPA-720				
Inter-M	SMX812	Mixer	G-MIX-B1212	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17	
Jamo	D7SUB	Speaker	G-SUB2225-24BAG				
Jazzkat	TWINKAT 210	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
JBL	EON10G2	Speaker	GPA-600	G-TOUR2X12-SPKR			
JBL	EON1500	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
JBL	EON15G2	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
JBL	EON15P-1	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
JBL	EON305	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
JBL	EON315	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
JBL	EON510	Speaker	G-TOUR2X12-SPKR				
JBL	EON515	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
JBL	EONSUBG2	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
JBL	JRX112M	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	GPA-1500	G-TOUR2X12-SPKR
JBL	JRX118S	Speaker	G-SUB2225-24BAG				
JBL	MP418S	Speaker	G-SUB2225-24BAG				
JBL	MRX512	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
JBL	PRX512M	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
JBL	PRX518S	Speaker	G-SUB2225-24BAG				
JBL	SRX712M	Speaker	GPA-SCVR450-515	GPA-E15	GPA-600	GPA-777	G-TOUR2X12-SPKR
JBL	SRX715	Speaker	G-TOUR2X15-SPKR				
JBL	VP7210	Speaker	GPA-450-515	GPA-E15	G-TOUR2X12-SPKR		
JBL	VP7212M	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
JBL	VRX915M	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
JBL	VRX932LA	Speaker	GPA-SCVR450-515	GPA-E15	GPA-600	GPA-777	G-TOUR2X12-SPKR
JBL	VRX932LAP	Speaker	GPA-700A	GPA-777	GPA-1500		
Johnson	JM120	Amp/Cabinet	G-212A				

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Johnson	JM150	Amp/Cabinet	G-212A				
Johnson	JM60	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Johnson	JT50	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
JVC	GD-V4200PZW	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
JVC	GD-V4210PZW	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
JVC	GD-V4211PCE	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
JVC	GD-V425PZW	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
JVC	GD-V500PZU	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
JVC	GD-V501U	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
JVC	GM-P420UG	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
JVC	GM-V42UG	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
JVC	LT-47X788	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			
JVC	PD-42DV2	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
JVC	PD-42V475	LCD/Plasma	G-LCD-4042	G-TOURLCDLIFT52			
JVC	PD-42WV74	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
JVC	PD-42WV84	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
JVC	PD-42WX84	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Kawai	EP3Kawai	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Kawai	ES6	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Ketron	AUDYA76	Keyboard	GKB-76	GK-76	G-TOUR76	GKC-1648	
Ketron	SoltonSD-1	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Konka	KDL32AT23U	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-LCDCOVER-42		
Korg	AX10A	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Korg	AX10B	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Korg	AX10G	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Korg	AX1500G	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Korg	AX3000G	DigitalAudioGear	G-MULTIFX-2411				
Korg	CR-4	DigitalAudioGear	GX-1818-6-TSA				
Korg	CK3	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Korg	D1200MKII	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO	GX-1818-6-TSA	GXDF-1116-5-TSA	
Korg	D1600	DigitalAudioGear	GX-1921-6-TSA	GXDF-1921-6-TSA			
Korg	D1600MKII	DigitalAudioGear	GX-1921-6-TSA	GXDF-1921-6-TSA			
Korg	D888	DigitalAudioGear	GX-1818-6-TSA	GXDF-1919-7-TSA			
Korg	EMX1	DigitalAudioGear	G-MULTIFX-1510	G-TOURCARRYONFO	GX-1818-6-TSA	GXDF-1116-5-TSA	
Korg	ESX1	DigitalAudioGear	G-MULTIFX-1510	G-TOURCARRYONFO	GX-1818-6-TSA	GXDF-1116-5-TSA	
Korg	K61P	Keyboard	GK-4212				
Korg	KAOSSPAD3	DigitalAudioGear	G-MULTIFX-1110				
Korg	KARMA	Keyboard	GKB-76	GK-76	GKPE-61-TSA	G-TOUR61	
Korg	KONTROL49	Keyboard	GKC-1540				
Korg	KORGM1	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Korg	Kronos61	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Korg	Kronos61	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Korg	Kronos73	Keyboard	GKB-76	GK-76	GKPE-88-TSA	G-TOUR76	GKC-1648
Korg	Kronos73	Keyboard	GKB-76	GK-76	GKPE-88-TSA	G-TOUR76	GKC-1648
Korg	Kronos88	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR88	GKC-1648
Korg	Kronos88	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR88	GKC-1648
Korg	M3-61	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Korg	M373	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	
Korg	M388	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR88	GKC-1648
Korg	M50-61	Keyboard	GK-4212	GKC-1540			
Korg	M50-88	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Korg	MICROKONTROL	Keyboard	GK-2110	GK-LT25W			
Korg	MICROKORG	Keyboard	GK-2110	GK-LT25W			
Korg	microKORGXL	Keyboard	GK-2110	GK-LT25W			
Korg	MR-1000	DigitalAudioGear	G-MULTIFX-1110				
Korg	MS2000	Keyboard	GKC-1540				
Korg	MSR2000B	Keyboard	GKC-1540				
Korg	OASYS76	Keyboard	GKPE-76D-TSA	GKPE-88-TSA	GKC-1648		
Korg	OASYS88	Keyboard	GKPE-88-TSA	G-TOUR88	GKC-1648		
Korg	PA1XPRO	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Korg	PA1XPROELITE	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Korg	PA2XPRO	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	
Korg	PA50	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Korg	PA-588	Keyboard	GKPE-88-TSA	G-TOUR88	GKC-1648		
Korg	PA80	Keyboard	GKC-1648				
Korg	PA88	Keyboard	GKPE-88-TSA	G-TOUR88	GKC-1648		
Korg	PADKONTROL	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Korg	PAD-KONTROL	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Korg	PROPHECY	Keyboard	GKB-49	GKPE-49-TSA			
Korg	R3	Keyboard	GK-LT25W				
Korg	RADIAS49-KEY	Keyboard	GKC-1540				
Korg	RADIASSYNTHESIZER	Keyboard	GKC-1540				
Korg	SP170	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Korg	SP-200	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
Korg	SP-250	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Korg	SP-300	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Korg	SP-500	Keyboard	GKB-76	GK-76	GKPE-76-TSA	GKPE-88-TSA	G-TOUR76
Korg	SV-173	Keyboard	GKB-76	GK-76			
Korg	SV-188	Keyboard	GKPE-88-TSA				
Korg	TR61	Keyboard	GK-4212	GKC-1540			

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Korg	TR88	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Korg	TRITONEXTREME61	Keyboard	GKB-76	GK-76	GKPE-61-TSA	G-TOUR61	
Korg	TRITONEXTREME76	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Korg	TRITONEXTREME88	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR88	GKC-1648
Korg	TRITONLE61	Keyboard	GK-4212	GKC-1540			
Korg	TRITONLE88	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Korg	TRITONSTUDIO61	Keyboard	GKB-76	GK-76	GKPE-61-TSA	G-TOUR61	GKC-1648
Korg	TRITONSTUDIO88	Keyboard	GKPE-88-TSA	G-TOUR88	GKC-1648		
Korg	TRITONSTUDIO76	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR88	GKC-1648
Korg	Wavedrum	DigitalAudioGear	GX-1818-6-TSA	GXDF-1919-7-TSA			
Korg	X3	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Korg	X-50	Keyboard	GK-4212	GK-49			
Korg	X5D	Keyboard	GKB-49	GK-4212	GK-49	GKPE-49-TSA	
Korg	ZERO4	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Korg	ZERO8	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
KRK	10S	Speaker	GPA-600				
KRK	Expose	Speaker	GPA-600	G-TOUR2X12-SPKR			
Kurzweil	K2600	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Kurzweil	K2600S	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Kurzweil	K2600X	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR88	GKC-1648
Kurzweil	K2600XS	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR88	GKC-1648
Kurzweil	K2661	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Kurzweil	PC161	Keyboard	GKB-61	GK-4212	GKPE-61-TSA	G-TOUR61	GKC-1540
Kurzweil	PC1SE	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	
Kurzweil	PC-1X	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Kurzweil	PC-1XL	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Kurzweil	PC2X	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Kurzweil	PC3	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Kurzweil	PC3K8	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Kurzweil	PC3X	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Kurzweil	PC88	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Kurzweil	SP2	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Kurzweil	SP3X	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Kurzweil	SP-76	Keyboard	GKB-76	GK-76	GKPE-76-TSA	GKPE-88-TSA	G-TOUR76
Kurzweil	SP-88	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
Kurzweil	SP-88X	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Kustom	KPC10	Speaker	G-TOUR2X12-SPKR				
Kustom	KPC10M	Speaker	G-TOUR2X12-SPKR				
Kustom	KPC12	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
Kustom	KPC12M	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
Kustom	KPC210M	Speaker	G-TOUR2X12-SPKR				
Kustom	KPM7250T	Mixer	GPA-720				
Kustom	KPM8420	Mixer	GPA-720				
Kustom	KPM8420T	Mixer	GPA-720				
L-Acoustics	SB15P	Speaker	G-SUB2225-24BAG				
LG	32LC5DC	LCD/Plasma	G-TOURLCDP-2632				
LG	32LG70	LCD/Plasma	G-TOURLCDP-2632				
LG	32LH40	LCD/Plasma	G-TOURLCDP-2632				
LG	37LC-7D	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
LG	37LH20	LCD/Plasma	G-LCDCOVER-42				
LG	37LH30	LCD/Plasma	G-LCDCOVER-42				
LG	42LG50	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52		
LG	42LG70	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52		
LG	42LH30	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
LG	42LH40	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
LG	42PC3DV	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
LG	42PCS5D	LCD/Plasma	G-LCD-4042	G-TOURLCDLIFT52			
LG	42PQ30C	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
LG	47LG50	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
LG	47LG60	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
LG	47LG70	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
LG	47LG90	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
LG	47LH30	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
LG	47LH40	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
LG	47LH50	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
LG	50PM1M	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
LG	50pq20	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
LG	50PQ30C	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
LG	50PS60C	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
LG	52LB5D	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			
LG	52LG50	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			
LG	55LD520	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
LG	60PS60C	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
LG	DU42PX12	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
LG	M3702C-BA	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
LG	M4210N-B21	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
LG	M4212C-BA	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
LG	M4212T-BA	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
LG	M4224C-BA	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
LG	M4714C-BA	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
LG	M4714T-BA	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
LG	M5201C-BA	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
LG	MU-40PA10B	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
LG	MU-42PM11	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
LG	MU-42PZ11B	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
LG	MU-42PZ15B	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
LG	MUS0PM10	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
LG	MU60P	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
LG	RU42DX11	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Line 6	212S CAB	Amp/Cabinet	G-212A				
Line 6	AX2	Amp/Cabinet	G-212A				
Line 6	CLASSIC 112 (FLEX 3)	Amp/Cabinet	G-212A				
Line 6	CLASSIC PLUS (FLEX 3)	Amp/Cabinet	G-212A				
Line 6	DUOVERB 212	Amp/Cabinet	G-212A				
Line 6	DUOVERB HEAD	Amp/Cabinet	G-901				
Line 6	FLEXTONE II	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Line 6	FLEXTONE II HD	Amp/Cabinet	G-901				
Line 6	FLEXTONE II PLUS	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Line 6	FLEXTONE II XL	Amp/Cabinet	G-212A				
Line 6	FLEXTONE III 112	Amp/Cabinet	G-112A	G-212A	G-212-ROTO		
Line 6	FLEXTONE III PLUS 112	Amp/Cabinet	G-112A	G-212A	G-212-ROTO		
Line 6	FLEXTONE III XL	Amp/Cabinet	G-212A				
Line 6	HD 147	Amp/Cabinet	G-901				
Line 6	LD15	Amp/Cabinet	G-112A	G-112-ROTO			
Line 6	SPIDER 212	Amp/Cabinet	G-212A				
Line 6	SPIDER II 112	Amp/Cabinet	G-112A	G-112-ROTO			
Line 6	SPIDER II 210	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Line 6	SPIDER II 212	Amp/Cabinet	G-901				
Line 6	SPIDER II HD	Amp/Cabinet	G-901				
Line 6	SPIDER II HD75	Amp/Cabinet	G-901				
Line 6	SPIDER III 120	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Line 6	SPIDER III 150	Amp/Cabinet	G-212A	G-212-ROTO			
Line 6	SPIDER III 75	Amp/Cabinet	G-112A	G-112-ROTO			
Line 6	SPIDER III HD150	Amp/Cabinet	G-901				
Line 6	SPIDER III HD75	Amp/Cabinet	G-901				
Line 6	Spider IV 120	Amp/Cabinet	G-112A	G-212A	G-212-ROTO		
Line 6	Spider IV 150	Amp/Cabinet	G-212A				
Line 6	Spider IV 75	Amp/Cabinet	G-112A	G-112-ROTO			
Line 6	Spider Jam	Amp/Cabinet	G-112A	G-112-ROTO			
Line 6	SPIDER VALVE MKII HD100	Amp/Cabinet	G-901				
Line 6	VETTA HEAD	Amp/Cabinet	G-901				
Line 6	VETTA II HEAD	Amp/Cabinet	G-901				
Line 6	BASSFLOORPOD	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Line 6	BASSPOD	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Line 6	BASSPODPRO	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Line 6	BASSPOD-PRO	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Line 6	BASSPODXTLIVE	DigitalAudioGear	G-MULTIFX-2411				
Line 6	BASSXTPRO	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Line 6	BOD	DigitalAudioGear	G-MULTIFX-1110	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA	
Line 6	BODXTPRO	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Line 6	DL4	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA			
Line 6	DM4	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA			
Line 6	FBC	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Line 6	FLOORPOD	DigitalAudioGear	G-MULTIFX-2411				
Line 6	FloorPODPlus	DigitalAudioGear	G-MULTIFX-2411				
Line 6	FM4	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA			
Line 6	M13STOMPBOX	DigitalAudioGear	G-TOURCARRYONFO	GX-1818-6-TSA			
Line 6	POD2.0	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Line 6	PODHD300	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Line 6	PODHD400	DigitalAudioGear	G-MULTIFX-2411				
Line 6	PODHD500	DigitalAudioGear	G-MULTIFX-2411				
Line 6	PODPRO	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Line 6	POD-Pro	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Line 6	PODPROXT	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Line 6	PODSTUDIOX2	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Line 6	PODX3	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Line 6	PODX3LIVE	DigitalAudioGear	G-MULTIFX-2411				
Line 6	PODXT(SHARCPOD)	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Line 6	PODXTLIVE	DigitalAudioGear	G-MULTIFX-2411				
Line 6	PODXTPRO	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Line 6	TONEPORTGX1	DigitalAudioGear	G-MULTIFX-1110				
Line 6	TONEPORTKB37	Keyboard	GK-2110	GK-LT25W			
Line 6	TONEPORTUX1	DigitalAudioGear	G-MULTIFX-1110				
Mackie	808	Mixer	GPA-720				
Mackie	1501	Speaker	GPA-700A	GPA-777	GPA-1500		
Mackie	1202-VLZ3	Mixer	G-MIX-B1212				
Mackie	1202VLZPRO	Mixer	G-MIX-B1212				
Mackie	1402-VLZ3	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Mackie	1402VLZPRO	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Mackie	1604-VLZ3	Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX19X21	G-TOUR19X21
Mackie	1604VLZPRO	Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX19X21	G-TOUR19X21
Mackie	1620i	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Mackie	1642-VLZ3	Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Mackie	1642VLZPro	Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Mackie	2404VLZ3	Mixer	GMIX-2030-6-TSA	GMIX-2030-8-TSA	G-MIX24X36	G-TOUR20X30	
Mackie	24X4	Mixer	G-MIX24X36				
Mackie	3204VLZ3	Mixer	G-MIX22X46	GMC-4221			
Mackie	402-VLZ3	Mixer	G-MIX-B0909				
Mackie	406M	Mixer	GPA-720				
Mackie	802-VLZ3	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Mackie	808M	Mixer	GPA-720				
Mackie	808S	Mixer	GPA-720				
Mackie	C200	Speaker	GPA-450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Mackie	C300Z	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
Mackie	CFX12	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Mackie	CFX12mk2	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Mackie	CFX16	Mixer	G-MIX-B2519	G-MIX-L1622	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Mackie	CFX16mk2	Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X25	G-MIX20X30
Mackie	CFX20	Mixer	G-MIX-L1926	G-MIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25	G-TOUR20X30
Mackie	CFX20mk2	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25	G-TOUR20X30	
Mackie	CONTROLUNIVERSALPRO	DigitalAudioGear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	
Mackie	D2	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Mackie	d4Pro	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Mackie	DFX12	Mixer	G-MIX-B1815	G-MIX-L1618A	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX17X18
Mackie	DFX6	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Mackie	HD1221	Speaker	GPA-450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
Mackie	HD1501	Speaker	G-SUB2225-24BAG				
Mackie	HR624	Speaker	GPA-600				
Mackie	HR626	Speaker	GPA-450-515	G-TOUR2X12-SPKR			
Mackie	HRS120	Speaker	G-SUB2225-24BAG				
Mackie	HUI	Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX19X21	G-TOUR19X21
Mackie	LINKUSB	DigitalAudioGear	G-BROADCASTER	G-MULTIFX-1110			
Mackie	MS1402-VLZ	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Mackie	ONYX1220	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Mackie	ONYX1220i	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Mackie	ONYX1620	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-8-TSA	G-MIX19X21	G-TOUR19X21
Mackie	ONYX1620i	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Mackie	ONYX1640	Mixer	G-MIX-B2519	GMIX-2030-8-TSA	GMIX-2225-8-TSA	G-MIX20X25	
Mackie	ONYX1640i	Mixer	GMIX-2030-8-TSA	G-TOUR20X25			
Mackie	ONYX24-4	Mixer	GMIX-3828-8-TSA				
Mackie	ONYX820i	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Mackie	PPM1008	Mixer	GPA-720				
Mackie	PPM1012	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Mackie	PPM608	Mixer	GPA-720				
Mackie	PPM808	Mixer	GPA-720				
Mackie	PROFX12	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Mackie	PROFX8	Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X25	G-TOUR20X30
Mackie	SR24.4VLZPRO	Mixer	G-MIX24X36				
Mackie	SR32.4VLZPRO	Mixer	G-MIX22X46	GMC-4221			
Mackie	SRM350	Speaker	GPA-450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Mackie	SRM350v2	Speaker	GPA-450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Mackie	SRM450	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-700A	GPA-1500	G-TOUR2X15-SPKR
Mackie	SRM450-V2	Speaker	GPA-SCVR450-515	GPA-450-515	GPA-700A	GPA-1500	G-TOUR2X15-SPKR
Mackie	SWA1501	Speaker	G-SUB2225-24BAG				
Mackie	TAPCO6306	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Mackie	TH-15A	Speaker	G-TOUR2X15-SPKR				
Mackie	U.420	Mixer	G-MIX-B1212				
Marantz	CDR310	DigitalAudioGear	G-MULTIFX-1110				
Marantz	PD4293D	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Marantz	PD5010D	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Marantz	PMD671	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Marshall	1912	Amp/Cabinet	G-112-ROTO				
Marshall	1922	Amp/Cabinet	G-212A	G-212-ROTO			
Marshall	2203	Amp/Cabinet	G-901				
Marshall	2245	Amp/Cabinet	G-901				
Marshall	2266	Amp/Cabinet	G-901				
Marshall	2466	Amp/Cabinet	G-901				
Marshall	1959SLPX	Amp/Cabinet	G-901				
Marshall	1962BLUESBREAKER	Amp/Cabinet	G-212A				
Marshall	1987X	Amp/Cabinet	G-901				
Marshall	2203K	Amp/Cabinet	G-901				
Marshall	2266C	Amp/Cabinet	G-212A				
Marshall	ASS0D	Amp/Cabinet	G-112A	G-112-ROTO			
Marshall	AVT150	Amp/Cabinet	G-112-ROTO	G-212-ROTO			
Marshall	AVT150H	Amp/Cabinet	G-901				
Marshall	AVT150HX	Amp/Cabinet	G-901				
Marshall	AVT20X	Amp/Cabinet	G-112-ROTO				
Marshall	AVT275X	Amp/Cabinet	G-212A	G-212-ROTO			

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Marshall	AVT50H	Amp/Cabinet	G-901				
Marshall	AVT50HX	Amp/Cabinet	G-901				
Marshall	AVT50X	Amp/Cabinet	G-112-ROTO	G-212-ROTO			
Marshall	AVT-50X	Amp/Cabinet	G-112-ROTO	G-212-ROTO			
Marshall	B65	Amp/Cabinet	G-112-ROTO				
Marshall	DSL100	Amp/Cabinet	G-901				
Marshall	DSL401	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Marshall	DSL50	Amp/Cabinet	G-901				
Marshall	JCM800	Amp/Cabinet	G-901				
Marshall	JCM800 2203X	Amp/Cabinet	G-901				
Marshall	JCM900	Amp/Cabinet	G-901				
Marshall	JCM-900	Amp/Cabinet	G-901				
Marshall	JTM100	Amp/Cabinet	G-901				
Marshall	JTM45	Amp/Cabinet	G-901				
Marshall	JVM205C	Amp/Cabinet	G-212A				
Marshall	JVM410C	Amp/Cabinet	G-212A				
Marshall	JVM410H	Amp/Cabinet	G-901				
Marshall	LEAD 100 MOSFET	Amp/Cabinet	G-901				
Marshall	MA100H	Amp/Cabinet	G-901				
Marshall	MA50C	Amp/Cabinet	G-901				
Marshall	MA50H	Amp/Cabinet	G-901				
Marshall	MB4210	Amp/Cabinet	G-212A	G-212-ROTO			
Marshall	MF350	Amp/Cabinet	G-901				
Marshall	MG250 DFX	Amp/Cabinet	G-212A	G-212-ROTO			
Marshall	MG250DFX	Amp/Cabinet	G-212A	G-212-ROTO			
Marshall	MG50DFX	Amp/Cabinet	G-112-ROTO				
Marshall	SUPER100JH	Amp/Cabinet	G-901				
Marshall	TSL100	Amp/Cabinet	G-901				
Marshall	TSL122	Amp/Cabinet	G-212A	G-212-ROTO			
Marshall	TSL60	Amp/Cabinet	G-901				
Marshall	TSL601	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Marshall	TSL602	Amp/Cabinet	G-212A	G-212-ROTO			
Marshall	VM2266H	Amp/Cabinet	G-901				
Marshall	VM2466H	Amp/Cabinet	G-901				
M-Audio	2	Keyboard	GK-2110	G-MEDIAPROBPXL			
M-Audio	AXIOM25	Keyboard	GK-2110	G-MEDIAPROBPXL			
M-Audio	AXIOM25	Keyboard	GK-2110	G-MEDIAPROBPXL			
M-Audio	AXIOM49	Keyboard	GKB-49	GK-49	GKPE-49-TSA		
M-Audio	AXIOM49	Keyboard	GKB-49	GK-49	GKPE-49-TSA		
M-Audio	AXIOM61	Keyboard	GK-4212				
M-Audio	BLACKBOX	DigitalAudioGear	G-BROADCASTER	G-MULTIFX-1110			
M-Audio	FIREWIRE1814	DigitalAudioGear	G-BROADCASTER	G-MULTIFX-1110			
M-Audio	FIREWIRE410	DigitalAudioGear	G-BROADCASTER	G-MULTIFX-1110			
M-Audio	FIREWIRESOLO	DigitalAudioGear	G-MULTIFX-1510		GXDF-1116-5-TSA		
M-Audio	KEYSTATION61ES	Keyboard	GK-4212	GKC-1540			
M-Audio	MICROTRACKII	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
M-Audio	MIDAIR25KEY	Keyboard	GK-2110	G-MEDIAPROBPXL			
M-Audio	MIDAIR37	Keyboard	GK-2110	G-MEDIAPROBPXL			
M-Audio	NRV10	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
M-Audio	O225KEY	Keyboard	GK-2110	G-MEDIAPROBPXL			
M-Audio	OXYGEN49	Keyboard	GKPE-49-TSA				
M-Audio	OXYGEN61	Keyboard	GK-4212				
M-Audio	OXYGEN8	Keyboard	GK-2110	G-MEDIAPROBPXL			
M-Audio	OXYGEN8V2	Keyboard	GK-2110	G-MEDIAPROBPXL			
M-Audio	OZONE	Keyboard	GK-2110	G-MEDIAPROBPXL			
M-Audio	PRO88	Keyboard	GKPE-88SLX-TSA	GKPE-88-TSA			
M-Audio	PROJECT MIN I/O	Amp/Cabinet	G-212A				
M-Audio	PROJECTMIXI/O	DigitalAudioGear	GX-1921-6-TSA	GX-2225-6-TSA	GXDF-1921-6-TSA	GXDF-2225-6-TSA	
M-Audio	PROKEYS88SX	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
M-Audio	RADIUM49	Keyboard	GKPE-49-TSA				
M-Audio	RADIUM61	Keyboard	GK-4212				
M-Audio	SONO61	Keyboard	GK-4212				
M-Audio	TORQXPONENT	Mixer	G-MIX-B1815	G-MIX-L1224	GMIX-1818-6-TSA	G-MIX12X24	GMC-2222
M-Audio	TRIGGERFINGER	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Maxent	MX-42VM10	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52			
Mesaboogie	112 LONESTAR 23	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Mesaboogie	112 LONESTAR 27	Amp/Cabinet	G-212A	G-212-ROTO			
Mesaboogie	112 THREE-QUARTER BACK	Amp/Cabinet	G-212A				
Mesaboogie	112 WIDE BODY	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Mesaboogie	212 LONESTAR	Amp/Cabinet	G-212A	G-212-ROTO			
Mesaboogie	212 THREE-QUARTER BACK	Amp/Cabinet	G-212-ROTO				
Mesaboogie	Mark V	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Mesaboogie	NOMAD 45 112	Amp/Cabinet	G-112-ROTO				
Mesaboogie	Triple Rectifier Head	Amp/Cabinet	G-901				
MeyerSound	M1DSUB	Speaker	GPA-777				
MeyerSound	UMS-1P	Speaker	GPA-777				
Mibsubishi	LT-46149	LCD/Plasma	G-TOURLCDLIFT52				
Microboards	COPYWRITER1052	DigitalAudioGear	GX-2030-8-TSA	GX-2225-8-TSA	GXDF-2030-8-TSA	GXDF-2225-8-TSA	

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Microboards	DVDRPM1016	DigitalAudioGear	GX-2030-8-TSA	GX-2225-8-TSA	GXDF-2030-8-TSA	GXDF-2225-8-TSA	
Microboards	QD127	DigitalAudioGear	GXDF-1116-8-TSA				
Microtek	MHP1	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Microtek	VS1	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA			
Midas	VENICE-1608	Mixer	GMIX-2030-8-TSA	GMIX-2225-8-TSA	G-MIX20X25		
Midas	Venice240	Mixer	GMIX-3828-8-TSA				
Midas	VENICE-24016	Mixer	GMIX-3828-8-TSA				
Midas	VENICE320	Mixer	GMIX-3828-8-TSA				
Midas	VENICE-32024	Mixer	GMIX-3828-8-TSA				
Mitsubishi	XD450U	Projector	GAV-LTOFFICE				
Mitsubishi	LEONARDO	LCD/Plasma	G-LCD-4042	G-TOURLCDLIFT52			
Mitsubishi	LT46231	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Mitsubishi	LT-52133	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Mitsubishi	LT-52144	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Mitsubishi	LT-52244	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Mitsubishi	PD-5010	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Mitsubishi	XD430U	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Mitsubishi	XL8U	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Motu	TRAVELER	DigitalAudioGear	G-MULTIFX-1510	G-TOURCARRYONFO	GX-1015-4-TSA	GXDF-1116-5-TSA	
Motu	ULTRALITE	DigitalAudioGear	G-BROADCASTER	G-MULTIFX-1110			
Nady	6600	Mixer	GPA-720				
Nady	CMX16A	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Nady	DKW-DUO	Wireless System	GM-1WP	GM-2W	GM-5W		
Nady	E03	Wireless System	G-INEARSYSTEM	GM-4WR	GM-5W		
Nady	Encore Duet Dual Headset	Wireless System	GM-1WP	GM-2W	GM-7W-TSA		
Nady	Encore Duet Dual Lavalier	Wireless System	GM-1WP	GM-2W	GM-7W-TSA		
Nady	MC12	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
Nady	MC15	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
Nady	MM4	Mixer	G-MIX-B0909	G-MIX-B1212			
Nady	MPM4130	Mixer	G-MIX-L1618A	GMC-2222			
Nady	MPM8175	Mixer	GPA-720				
Nady	MXE1212	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Nady	MXE612	Mixer	G-MIX-B0909	G-MIX-B1212			
Nady	MXE812	Mixer	G-MIX-B0909	G-MIX-B1212			
Nady	PFW12	Speaker	G-SUB2225-24BAG				
Nady	PRM400	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1818-6-TSA	GMIX-1921-6-TSA	G-MIX17X18
Nady	PS112	Speaker	GPA-SCVR450-515	GPA-777	G-TOUR2X12-SPKR		
Nady	PSW15	Speaker	G-SUB2225-24BAG				
Nady	PSW18	Speaker	G-SUB2225-24BAG				
Nady	PTS1015	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
Nady	PTS515	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
Nady	SPM6600	Mixer	GPA-720				
Nady	SPM8600	Mixer	GPA-720				
Nady	SRM10X	Mixer	G-MIX-B0909	G-MIX-B1212			
Nady	SRM12X	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Nady	SRM-14X	Mixer	G-MIX-B1515	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18
Nady	UHF-3	Wireless System	GM-1WP	GM-2W	GM-7W-TSA		
NEC	3300	LCD/Plasma	G-TOURLCDP-2632				
NEC	4000	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
NEC	4200	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	4205	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	4210	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	5000	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
NEC	42MP1	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	42MP2	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	42MP4	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	42PD1	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	42PD2	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	42VM5	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-LCDCOVER-42		
NEC	42VP4	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	42VP5&42VP5A	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	42XM3	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	42XM3A	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	50MP1	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
NEC	50MP2	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
NEC	50MP3	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
NEC	50PD1	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
NEC	50XM3	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
NEC	50XM4A	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
NEC	50XM5	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
NEC	50XR4A	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
NEC	61XMA	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
NEC	61XR4	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
NEC	LCD2335WXM	LCD/Plasma	G-TOURLCDP-2023				
NEC	LCD4010	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
NEC	LCD4020	LCD/Plasma	G-LCDCOVER-42				
NEC	LCD4215	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
NEC	LCD4610	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
NEC	LCD4615	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
NEC	LCD4620	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
NEC	LCD4620ZAV	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
NEC	LCD5220	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
NEC	LCD5710-2-AV	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60			
NEC	LCD5710-2-IT	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60			
NEC	LT150Z	Projector	GAV-LT		GAV-LTOFFICETSA	GAV-LTOFFICE-W	
NEC	M40B-AV	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
NEC	M46B-AV	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			
NEC	NP300	Projector	GAV-LTOFFICE				
NEC	NP400	Projector	GAV-LTOFFICE				
NEC	NP500W	Projector	GAV-LTOFFICE				
NEC	P42XC10	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	P42XP10-BK	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	P50XC10	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
NEC	P50XP10	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
NEC	P60XC10	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
NEC	P60XP10-BK	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
NEC	PX-42V5RA	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	PX-42VMA	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	PX-42VP4A	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	PX-42XM2A	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
NEC	VT-37	Projector	GAV-LTOFFICE				
NEC	VT-47	Projector	GAV-LTOFFICE				
NEC	VT-470	Projector	GAV-LTOFFICE				
NEC	VT-570	Projector	GAV-LTOFFICE				
NEC	VT-575	Projector	GAV-LTOFFICE				
NEC	VT-670	Projector	GAV-LTOFFICE				
NEC	VT-676	Projector	GAV-LTOFFICE				
NEC	X461UN	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Newtek	TricasterBroadcast	Mixer	GPA-720				
Nord	ELECTRO261	Keyboard	GKB-49	GK-4212	GK-49	GKPE-49-TSA	GKC-1540
Nord	ELECTRO361	Keyboard	GKB-49	GK-4212	GK-49	GKPE-49-TSA	GKC-1540
Nord	NC1	Keyboard	GKB-61	GKC-1540			
Nord	STAGE73	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	
Nord	STAGE76	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	
Nord	STAGE88	Keyboard	GKB-76	GK-76	GKPE-76-TSA	GKPE-88-TSA	G-TOUR76
Novation	REMOTE-25LE	Keyboard	G-MEDIAPROBPXL				
Novation	REMOTE25SL	Keyboard	GK-2110	G-MEDIAPROBPXL			
Novation	REMOTE25SLC	Keyboard	GK-2110	G-MEDIAPROBPXL			
Novation	REMOTE37SL	Keyboard	GK-2110	G-MEDIAPROBPXL			
Novation	REMOTE49	Keyboard	GKB-49	GK-49	GKPE-49-TSA		
Novation	REMOTE49SLC	Keyboard	GKB-49	GK-49	GKPE-49-TSA		
Novation	REMOTE61	Keyboard	GK-4212				
Novation	REMOTEZEROSL	DigitalAudioGear	G-MULTIFX-2411				
Novation	XIO-SYNTH25	Keyboard	G-MEDIAPROBPXL				
Novation	XSTATION25	Keyboard	GK-2110	G-MEDIAPROBPXL			
Novation	XSTATION49	Keyboard	GKB-49	GK-49	GKPE-49-TSA		
Novation	XSTATION61	Keyboard	GK-4212				
Numark	5000FX	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Numark	DM1001X	Mixer	G-MIX-B1212				
Numark	DM1002MKII	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Numark	DM1050	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Numark	DM2050	Mixer	G-MIX-B1212	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17	
Numark	DM3001X	Mixer	G-MIX-B1515	G-TOUR12X17			
Numark	DM3002X	Mixer	G-MIX-B1515	G-TOUR12X17			
Numark	DM3050	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Numark	DM950	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Numark	DM950USB	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Numark	DMX01	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Numark	DMX03	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Numark	DMX06	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Numark	DXM01USB	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Numark	DXM06	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Numark	DXM09	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1015-4-TSA	G-TOUR12X17	GMC-2222
Numark	DXMPRO	Mixer	G-MIX-B2118	G-MIX-L1822	G-MIX19X21	GMC-2222	
Numark	iDJ	Mixer	G-MIX-B1212				
Numark	IDJ2	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Numark	M3	Mixer	G-MIX-B1212				
Numark	MATRIX2	Mixer	G-MIX-B1515	G-MIX-B1815	GMIX-1015-4-TSA	G-TOUR12X17	
Numark	MATRIX3	Mixer	G-MIX-B1515	G-MIX-B1815	GMIX-1015-4-TSA	G-TOUR12X17	
Numark	MIXMEISTERCONTROL	Mixer	G-MIX-L1224	G-MIX-L1622	G-MIX12X24	GMC-2222	
Numark	NUVJ	Mixer	G-MIX-B2519	GMIX-2030-8-TSA	GMIX-2225-8-TSA	G-MIX20X25	
Numark	PPD01	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1015-4-TSA	G-TOUR12X17	GMC-2222
OpenLabs	NEKO6461	Keyboard	GKPE-76D-TSA	GKC-1648			
OpenLabs	NEKO6476	Keyboard	GKC-1648				
OpenLabs	NEKOLE61	Keyboard	GKPE-76D-TSA	GKC-1648			
OpenLabs	NEKOLE76	Keyboard	GKC-1648				
Optoma	EZPRO716	Projector	GAV-LTOFFICE				
Optoma	EZPRO719	Projector	GAV-LTOFFICE				

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Optoma	EZPRO732	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Optoma	EZPRO747	Projector	GAV-LTOFFICE				
Optoma	HD20	Projector	GAV-LTOFFICE				
Optoma	PRO150S	Projector	GAV-LTOFFICE				
Optoma	PRO250X	Projector	GAV-LTOFFICE				
Optoma	Pro350W	Projector	GAV-LTOFFICE				
Orange	Rocker 30	Amp/Cabinet	G-112A	G-112-ROTO			
Orange	TH30 Combo	Amp/Cabinet	G-112-ROTO	G-212-ROTO			
Panasonic	46PZ80U	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	46PZ85U	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	PT-37PD1	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Panasonic	PT-42P1	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Panasonic	PT-50PD3-P	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	PT-AE700U	Projector	GAV-LTOFFICE				
Panasonic	PT-L500U	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Panasonic	PTLB10SVU	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Panasonic	PT-LB10U	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Panasonic	PTLB10VU	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Panasonic	PT-LB20NTU	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Panasonic	PTLB20SU	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Panasonic	PTLB20U	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Panasonic	PTLB20VU	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Panasonic	PT-LB30	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Panasonic	PTLB30NTU	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Panasonic	PTLB50NTU	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Panasonic	PTLB50SU	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Panasonic	PTLB50U	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Panasonic	PTLB60NTU	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Panasonic	PTLB60U	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Panasonic	PT-LM1	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Panasonic	PT-LM2	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Panasonic	TC23LX50	LCD/Plasma	G-TOURLCDP-2023				
Panasonic	TC-32LX60	LCD/Plasma	G-TOURLCDP-2632				
Panasonic	TC-37P1F	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Panasonic	TC-50PX14	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Panasonic	TC-L32C12	LCD/Plasma	G-TOURLCDP-2632				
Panasonic	TC-L37X1	LCD/Plasma	G-LCDCOVER-42				
Panasonic	TC-L42U12	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52		
Panasonic	TC-P42C1	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52		
Panasonic	TCP42S1	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52		
Panasonic	TC-P42U1	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52		
Panasonic	TC-P42X1	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Panasonic	TCP46G10	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Panasonic	TCP46S1	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Panasonic	TCP46U1	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Panasonic	TC-P50G10	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	TC-P50S1	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Panasonic	TC-P50U1	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	TC-P50X1	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Panasonic	TC-P54S1	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			
Panasonic	TH37PH9UK	LCD/Plasma	G-LCDCOVER-42				
Panasonic	TH-37PR11UK/UH	LCD/Plasma	G-LCDCOVER-42				
Panasonic	TH-37PWD5UX	LCD/Plasma	G-LCDCOVER-42				
Panasonic	TH-37PWD6	LCD/Plasma	G-LCDCOVER-42				
Panasonic	TH-37PWD7UY	LCD/Plasma	G-LCDCOVER-42				
Panasonic	TH-42PD60U	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Panasonic	TH-42PDD3B	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Panasonic	TH-42PF11UK	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Panasonic	TH-42PH11UK	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Panasonic	TH-42PH9UK	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Panasonic	TH-42PHD5UY	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Panasonic	TH-42PHD6	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Panasonic	TH-42PHD6UY	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Panasonic	TH-42PHD7UY	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Panasonic	TH-42PHD8UK	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Panasonic	TH-42PR11UK/UH	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52		
Panasonic	TH42PS9UK	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Panasonic	TH-42PWD3U	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Panasonic	TH-42PWD5UY	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Panasonic	TH-42PWD6UY	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Panasonic	TH42PX25U	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	TH-42PX600U	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Panasonic	TH-42PX60U	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52		
Panasonic	TH46PZ80U	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	TH46PZ85U	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	TH-50PF11UK	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	TH50PF9UK	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	TH-50PH11UK	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	TH-50PH9	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	TH-50PH9UK	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Panasonic	TH-50PHD3U	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	TH-50PHD5UY	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	TH-50PHD7UY	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	TH-50PX	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	TH-50PX25U/P	LCD/Plasma	G-TOURLCDLIFT65	G-LCDCOVER-65			
Panasonic	TH-50PX6	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	TH-50THD6UI	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	TH-50THD6UY	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Panasonic	TH-58PF11UK	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Panasonic	TH-58PH10UKA	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Panasonic	TH58PX6	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Panasonic	TH-58PZ800U	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Panasonic	TH-65PF11UK	LCD/Plasma	G-TOURLCDLIFT65	G-LCDCOVER-65			
Panasonic	TH65PF9UK	LCD/Plasma	G-TOURLCDLIFT65	G-LCDCOVER-65			
Peavey	16FX	Mixer	G-MIX-B2519	GMIX-1921-8-TSA	GMIX-2225-8-TSA	G-MIX20X25	
Peavey	24FX	Mixer	G-MIX-B2519	GMIX-2030-8-TSA	GMIX-2225-8-TSA	G-MIX20X25	
Peavey	5150 HEAD	Amp/Cabinet	G-901				
Peavey	6505 HEAD	Amp/Cabinet	G-901				
Peavey	6505 PLUS HEAD	Amp/Cabinet	G-901				
Peavey	BANDIT 112	Amp/Cabinet	G-212-ROTO				
Peavey	CLASSIC 30	Amp/Cabinet	G-112A	G-112-ROTO			
Peavey	CLASSIC 50/212	Amp/Cabinet	G-212A	G-212-ROTO			
Peavey	CLASSIC 50/410	Amp/Cabinet	G-212A				
Peavey	DELTA BLUES 115	Amp/Cabinet	G-112-ROTO	G-212-ROTO			
Peavey	DELTA BLUES 210	Amp/Cabinet	G-112-ROTO	G-212-ROTO			
Peavey	JSX 212COMBO	Amp/Cabinet	G-212A	G-212-ROTO			
Peavey	MAX 112	Amp/Cabinet	G-112A	G-112-ROTO			
Peavey	MP600	Mixer	GPA-720				
Peavey	NASHVILLE 1000	Amp/Cabinet	G-212A	G-212-ROTO			
Peavey	NASHVILLE 112	Amp/Cabinet	G-112A	G-112-ROTO			
Peavey	PR10NEO	Speaker	GPA-600	G-TOUR2X12-SPKR			
Peavey	PR12NEO	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
Peavey	PV10	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Peavey	PV12M	Speaker	GPA-600	GPA-777			
Peavey	PV14	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Peavey	PV15M	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
Peavey	PV20	Mixer	G-MIX-B2519	G-MIX-L1622	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Peavey	PV20USB	Mixer	G-MIX-B2519	G-MIX-L1622	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Peavey	PV6	Mixer	G-MIX-B1212				
Peavey	PV8	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Peavey	RQ1606M	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25	G-TOUR20X30	G-TOUR24X36
Peavey	RQ200	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1015-4-TSA	G-TOUR12X17	
Peavey	RQ2310	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Peavey	RQ2314	Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Peavey	RQ2318	Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X25	G-TOUR20X30
Peavey	RQ2326	Mixer	G-MIX24X36				
Peavey	S-14P	Mixer	GMIX-1818-8-TSA	GMIX-1921-8-TSA			
Peavey	STUDIO PRO 112	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Peavey	SUPREME XL	Amp/Cabinet	G-212-ROTO				
Peavey	TRANSTUBE 112 EFX	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Peavey	TRIPLE XXX	Amp/Cabinet	G-212A	G-212-ROTO			
Peavey	TRIPLE XXX 112	Amp/Cabinet	G-112A	G-112-ROTO	G-212-ROTO		
Peavey	TRIPLE XXX 212	Amp/Cabinet	G-212A	G-212-ROTO			
Peavey	UNITY1002-8RQ	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Peavey	VALVEKING 100 HEAD	Amp/Cabinet	G-901				
Peavey	VALVEKING 112	Amp/Cabinet	G-112A	G-112-ROTO			
Peavey	VALVEKING 212	Amp/Cabinet	G-212A	G-212-ROTO			
Peavey	Vypyr Tube 120	Amp/Cabinet	G-112A	G-112-ROTO			
Peavey	XR1212	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Peavey	XR1220	Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X25	G-TOUR20X30
Peavey	XR1600F	Mixer	G-TOUR20X25				
Peavey	XR560	Mixer	GPA-720				
Peavey	XR600G	Mixer	GPA-720				
Peavey	XR684F	Mixer	GPA-720				
Peavey	XR696F	Mixer	GPA-720				
Peavey	XR800F	Mixer	G-MIX-B2519	GMIX-1818-8-TSA	GMIX-1921-8-TSA		
Peavey	XR800FPLUS	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-8-TSA	G-MIX19X21	G-TOUR19X21
Peavey	XR8300	Mixer	GPA-720				
Peavey	XR8600	Mixer	GPA-720				
Peavey	XXL	Amp/Cabinet	G-212A				
Philips	20PF5120	LCD/Plasma	G-TOURLCDP-2023				
Philips	37PF9631D	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52		
Philips	42FD9932	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Philips	42FD9934	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Philips	42FD9935	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Philips	42FD9954	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Philips	42FD9955	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Philips	42PW9962	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Philips	42PW9982	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Philips	47PFL3603D/27	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Philips	47PFL7403D/27	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Philips	50FD9955	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Philips	50PF7321	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Philips	50PF9630A	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Philips	50PF9830	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Philips	52PFL7422D/37	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			
Philips	52PFL7432D/37	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			
Phonic	HELIX18FW	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Phonic	HELIXBOARD12	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Phonic	HELIXBOARD17	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Phonic	IMPACT24.4	Mixer	G-MIX22X46	GMC-4221			
Phonic	MM1002	Mixer	G-MIX-B1212				
Phonic	MM1202	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Phonic	MM1705	Mixer	G-MIX-B1515	G-MIX-B1818	G-MIX-L1618A	G-MIX17X18	
Phonic	MM1805(X)	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Phonic	MM502	Mixer	G-MIX-B0909				
Phonic	MR1843X	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Phonic	MR3243	Mixer	GMIX-3828-6-TSA	G-MIX24X36	G-TOUR24X36		
Phonic	MR4243(D)	Mixer	G-MIX22X46				
Phonic	MR4283	Mixer	G-MIX22X46				
Phonic	MR4283D	Mixer	G-MIX22X46				
Phonic	MRS1-20	Mixer	GMIX-3828-6-TSA	G-MIX24X36	G-TOUR24X36		
Phonic	MRS1-30	Mixer	G-MIX22X46				
Phonic	MU1002	Mixer	G-MIX-B1212				
Phonic	MU1202	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Phonic	MU502	Mixer	G-MIX-B0909	G-MIX-B1212			
Phonic	MU802	Mixer	G-MIX-B1212				
Phonic	POWERPOD1840	Mixer	G-MIX-B2118	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21	GMC-2222
Phonic	POWERPOD1860II	Mixer	G-MIX-B2118	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21	GMC-2222
Phonic	POWERPOD2280	Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Phonic	POWERPOD620	Mixer	GPA-720				
Phonic	POWERPOD740	Mixer	GPA-720				
Phonic	POWERPOD780+	Mixer	GPA-720				
Phonic	PowerpodSeries885plus	Mixer	GPA-720				
Pioneer	614MX	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Pioneer	CDJ-350	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Pioneer	DJM-1000	Mixer	G-MIX-B2519	GMIX-1921-8-TSA	G-MIX20X25		
Pioneer	DJM-300	Mixer	G-MIX-B1515	G-TOUR12X17			
Pioneer	DJM-3000	Mixer	G-MIX-L1224				
Pioneer	DJM-300S	Mixer	G-MIX-B1515	G-TOUR12X17			
Pioneer	DJM-400	Mixer	G-MIX-B1212	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17	
Pioneer	DJM-500	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Pioneer	DJM-600	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Pioneer	DJM-707	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Pioneer	DJM-800	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Pioneer	DJM-909	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Pioneer	DVD-V7300D	Mixer	G-MIX-B1815	G-TOUR12X17			
Pioneer	EFX1000	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Pioneer	EFX500	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Pioneer	PDP-4050HD	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Pioneer	PDP-4304	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Pioneer	PDP-4330HD	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Pioneer	PDP-4330HDW/SPKS	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Pioneer	PDP-433CMX	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Pioneer	PDP-4340HD	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Pioneer	PDP-501	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Pioneer	PDP-502	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Pioneer	PDP-5020FD	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Pioneer	PDP-502MX	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Pioneer	PDP-5030HD	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Pioneer	PDP-503CMX	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Pioneer	PDP-5040HD	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Pioneer	PDP505CMX	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Pioneer	PDP-505HD	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Pioneer	PDP5070HD	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Pioneer	PDP-50MXE	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Pioneer	PDP-6020FD	LCD/Plasma	G-TOURLCDLIFT65	G-LCDCOVER-65			
Pioneer	PDP6070	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Pioneer	PDP6100	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Pioneer	PDP-910HD	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Pioneer	PRO-1110HD	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Pioneer	SVM1000	Mixer	G-MIX-B2519	GMIX-1921-8-TSA	G-MIX20X25		
Planar	PDP42B	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Planar	PDP42HD	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Plasmasync	4210W	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Plus	U2-1200	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Plus	U4136	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Plus	U4232	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Plus	U5-111	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Plus	U5-112	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Plus	U5132	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Plus	U5-232	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Plus	U5-332	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Plus	XU4-136	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Polycom	SOUNDSTATION2	DigitalAudioGear	G-TOURCARRONFO	GX-1818-6-TSA			
Polycom	VSX3000	LCD/Plasma	G-TOURLCDP-2023				
Presonus	HP4	Mixer	G-MIX-B0909				
Presonus	STUDIOLIVE16.4.2	Mixer	G-MIX-B2519	GMIX-2030-8-TSA	GMIX-2225-8-TSA	G-MIX20X25	
Presonus	STUDIOLIVE24.4.2	Mixer	GMIX-2225-8-TSA	GMIX-3828-8-TSA			
Proel	EX185ASub	Speaker	G-SUB2225-24BAG				
PROEL	M20USB20	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25	G-TOUR20X30	
ProjectionDesign	Action!M20	Projector	GAV-LTOFFICE				
ProjectionDesign	cineo20	Projector	GAV-LTOFFICE				
ProjectionDesign	evo22sx+	Projector	GAV-LTOFFICE				
ProjectionDesign	F22series	Projector	GAV-LTOFFICE				
Proscan	40LC45S	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
PylePro	PYD-710	Mixer	G-MIX-B1212				
Pyle-Pro	PYD1010	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Pyle-Pro	PYD1015	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Pyle-Pro	PYD1020	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Pyle-Pro	PYD1910	Mixer	G-MIX-L1224	G-MIX12X24			
Pyle-Pro	PYD1920	Mixer	G-MIX-L1224	G-MIX12X24			
Pyle-Pro	PYD720	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
QSC	HPR122i	DigitalAudioGear	GXR-3219-1603				
QSC	K10	Speaker	GPA-600	GPA-777	G-TOUR2X12-SPKR		
QSC	K12	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
Randall	RH150DG3	Amp/Cabinet	G-901				
Randall	RM50HB	Amp/Cabinet	G-112A				
Randall	RM50HB2	Amp/Cabinet	G-112A				
Rane	Empath	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1015-4-TSA	G-TOUR12X17	
Rane	GRANDMASTERFLASH	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1015-4-TSA	G-TOUR12X17	GMC-2222
Rane	Sixty-Eight	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Rane	TOURING/CLUBMIXER	Mixer	G-MIX-B2118	G-MIX-L1822	G-MIX19X21		
Rane	TTM56	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Rane	TTM56S	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1015-4-TSA	G-TOUR12X17	
Rane	TTM575L	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1015-4-TSA	G-TOUR12X17	
RCA	L46FHD37	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
RCA	PH50300	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
RCA	PH50400	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
RCA	PH50500	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
RCA	PR42300	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
RCF	ART310A	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
RCF	ART312A	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
RCF	ART322A	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
RCF	ART522-A	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
RCF	ART525-A	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
RCF	ART705-A5	Speaker	G-SUB2225-24BAG				
RCF	CW3110	Speaker	G-TOUR2X12-SPKR				
RCF	CW5212	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	
RCF	CW5215	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
RCF	SW4012	Speaker	GPA-600				
RCF	TT25-SMA	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
RCF	TTL31-A	Speaker	GPA-777				
Revox	E-642	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Revox	E-650	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
RMS	10-400S	Mixer	GPA-720				
RMS	6150R	Mixer	GPA-720				
Rocktron	UTOPIAG100	DigitalAudioGear	GX-1818-6-TSA				
Rocktron	UTOPIAG200	DigitalAudioGear	GX-1818-6-TSA				
Roland	CD2	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Roland	CD2E	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Roland	D2	Keyboard	G-MEDIAPROBP				
Roland	DJ-2000	DigitalAudioGear	G-TOURCARRONFO				
Roland	DR3	DigitalAudioGear	G-MULTIFX-1110				
Roland	DR670	DigitalAudioGear	G-MULTIFX-1110				
Roland	DR880	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Roland	E09	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Roland	E60	Keyboard	GKB-76	GK-76	GKPE-76-TSA	GKPE-88-TSA	G-TOUR76
Roland	E80	Keyboard	GKPE-76D-TSA				
Roland	EP880	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR88	GKC-1648
Roland	EXR-3	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Roland	EXR46-OR	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Roland	EXR-5	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Roland	EXR-7	Keyboard	GKB-76	GK-76	GKPE-88-TSA	G-TOUR76	
Roland	FANTOMG6	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Roland	FANTOMG7	Keyboard	GKB-76	GK-76	GKPE-88-TSA	G-TOUR76	GKC-1648
Roland	FANTOMX6	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Roland	FANTOMX7	Keyboard	GKB-76	GK-76	GKPE-76-TSA	GKPE-88-TSA	G-TOUR76

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Roland	FANTOMX8	Keyboard	GKPE-88-TSA	G-TOUR88	GKC-1648		
Roland	FANTOMXA61	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Roland	FC-300	DigitalAudioGear	G-MULTIFX-2411				
Roland	FP-2	Keyboard	GKB-76	GK-76	GKPE-76-TSA	GKPE-88-TSA	G-TOUR76
Roland	FP-4	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Roland	FP4BK	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Roland	FP4C-BK	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Roland	FP4C-WT	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Roland	FP4WH	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Roland	FP-5	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR88SLIM	
Roland	FP-5C	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR88SLIM	
Roland	FP-7	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Roland	FP-7F	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Roland	G-1000	Keyboard	GKB-76	GK-76	GKPE-88-TSA	G-TOUR76	GKC-1648
Roland	G-70	Keyboard	GKB-76	GK-76	GKPE-88-TSA	GKC-1648	
Roland	GR20	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Roland	GR20S	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Roland	GR-33	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO	GX-1818-6-TSA		
Roland	GR-55	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO	GXDF-1116-5-TSA		
Roland	GW-7	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Roland	GW-8	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Roland	HandsonicHPD	DigitalAudioGear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	
Roland	JP-8000	Keyboard	GKB-49	GK-49	G-TOUR61	GKC-1540	
Roland	JUNO-D	Keyboard	GK-4212	GKC-1540			
Roland	JUNOD61	Keyboard	GK-4212	GKC-1540			
Roland	JUNO-G	Keyboard	GK-4212	GKC-1540			
Roland	JunoGi	Keyboard	GK-4212	GKC-1540			
Roland	JUNOSTAGE	Keyboard	GKB-76	GK-76	GKPE-76-TSA	GKPE-88-TSA	G-TOUR76
Roland	JV30	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Roland	LucinaAX-09	Keyboard	GKPE-49-TSA				
Roland	MC-307	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO	GX-1818-6-TSA		
Roland	MC-808	DigitalAudioGear	GX-1818-6-TSA				
Roland	MC-909	DigitalAudioGear	GX-1921-6-TSA	GXDF-1921-6-TSA			
Roland	MV-8000	DigitalAudioGear	GX-2225-6-TSA	GXDF-2225-6-TSA			
Roland	MV-8800	DigitalAudioGear	GX-1921-6-TSA	GX-2225-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GXDF-2225-6-TSA
Roland	PD105WT	DigitalAudioGear	G-TOURCARRYONFO	GX-1818-6-TSA			
Roland	PK-5A	DigitalAudioGear	GX-2030-6-TSA	GXDF-2030-6-TSA			
Roland	RD150	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Roland	RD-170	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Roland	RD-300GX	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Roland	RD300NX	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Roland	RD-300SX	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Roland	RD-70	Keyboard	GKPE-88-TSA	G-TOUR88	GKC-1648		
Roland	RD-700GX	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Roland	RD-700NX	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Roland	RD-700SX	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Roland	RS-50	Keyboard	GKB-61	GK-4212	GKPE-61-TSA	G-TOUR61	GKC-1540
Roland	RS-70	Keyboard	GKB-61	GK-4212	GKPE-61-TSA	G-TOUR61	GKC-1540
Roland	SH-201	Keyboard	GK-49	GKC-1540			
Roland	SH-32	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Roland	SONICCELL	Keyboard	G-MEDIAPROBP				
Roland	SP-404	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Roland	SP-404SX	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Roland	SP-555	DigitalAudioGear	GXDF-1116-5-TSA				
Roland	SP-606	DigitalAudioGear	G-TOURCARRYONFO	GX-1818-6-TSA	GXDF-1116-5-TSA		
Roland	SPD20	DigitalAudioGear	GX-1818-6-TSA	GXDF-1919-7-TSA			
Roland	SPD-30	DigitalAudioGear	G-MULTIFX-2411				
Roland	SPD-5	DigitalAudioGear	GX-1818-6-TSA				
Roland	TD-20	DigitalAudioGear	G-MULTIFX-1510	GXDF-1116-5-TSA			
Roland	TD-9	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA			
Roland	VA-76	Keyboard	GKB-76	GK-76	GKPE-88-TSA	G-TOUR76	GKC-1648
Roland	VK-7	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	
Roland	VK8	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	
Roland	VK-8M	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Roland	VP-550	Keyboard	GK-49	GKC-1540			
Roland	VR760	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Roland	VS-2000CD	DigitalAudioGear	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA		
Roland	VS-2400CD	DigitalAudioGear	GX-1921-6-TSA	GX-2225-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	GXDF-2225-6-TSA
Roland	VS2480CD	DigitalAudioGear	GX-2225-6-TSA	GXDF-2225-6-TSA			
Roland	VS2480DVD	DigitalAudioGear	GX-2225-6-TSA	GXDF-2225-6-TSA			
Roland	VS2480M	DigitalAudioGear	GX-2030-6-TSA	GX-2225-6-TSA	GXDF-2030-6-TSA	GXDF-2225-6-TSA	
Roland	VSYNTH	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Roland	VSYNTHGT	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Roland	XP30	Keyboard	GK-4212	GKC-1540			
Roland	XP-50	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Roland	XP80	Keyboard	GKB-76	GK-76	GKPE-76-TSA	GKPE-88-TSA	G-TOUR76
Roland	XV-88	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR88	GKC-1648
Rolls	MX122	Mixer	G-MIX-B0909				
Rolls	MX152	Mixer	G-MIX-B0909				
Rolls	RM82	DigitalAudioGear	G-MULTIFX-2411				

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
RSS	M-48	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Runco	PL-42	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Runco	PL-42C	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Runco	PL-50C	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sampo	PME-4256	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sampo	PME-42X6	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sampo	PME-50X6	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Samson	DB1500A	Speaker	G-SUB2225-24BAG				
Samson	L1200	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Samson	L2000	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25	G-TOUR20X30	
Samson	L2400	Mixer	GMIX-3828-8-TSA	G-MIX24X36			
Samson	L3200	Mixer	G-MIX22X46				
Samson	MDR10	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Samson	MDR1064	Mixer	G-MIX-B1515	G-MIX-B1818	G-MIX-L1618A		
Samson	MDR16	Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X25	G-MIX20X30
Samson	MDR1688	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Samson	MDR6	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Samson	MDR6	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Samson	MDR624	Mixer	G-MIX-B1212				
Samson	MDR8	Mixer	G-MIX-B1212				
Samson	MIXPAD12	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Samson	MIXPAD4	Mixer	G-MIX-B0909	G-MIX-B1212			
Samson	MIXPAD9	Mixer	G-MIX-B1212				
Samson	RB10S	Speaker	GPA-600				
Samson	RESOLV120A	Speaker	GPA-600				
Samson	RS15S	Speaker	G-SUB2225-24BAG				
Samson	RS18S	Speaker	G-SUB2225-24BAG				
Samson	Stage 5	Wireless System	GM-5W				
Samson	Stage 55	Wireless System	GM-5W				
Samson	TM300	Mixer	G-MIX-B2118	G-MIX-L1822	G-MIX19X21	GMC-2222	
Samson	TM500	Mixer	G-MIX-B2118	G-MIX-L1822	G-MIX19X21	GMC-2222	
Samson	TXM16	Mixer	GMIX-2225-8-TSA	G-MIX20X25			
Samson	TXM20	Mixer	GMIX-2225-8-TSA				
Samsung	400CX	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	400CXN	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	400DX	LCD/Plasma	G-TOURLCD-3743T	G-LCDCOVER-42			
Samsung	400DXN	LCD/Plasma	G-TOURLCD-3743T	G-LCDCOVER-42			
Samsung	400FP-2	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	400FPN-2	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	400TSN-2	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	403T	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52		
Samsung	460CX	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	460CXN	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	460DR	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	460DRN	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	460DX	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Samsung	460DXN	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Samsung	460FP-2	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	460FPN-2	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	460TSN-2	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			
Samsung	460UT	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Samsung	460UTN	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Samsung	460UTN-UD	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Samsung	520DX	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	520DXN	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	570DX	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Samsung	570DXN	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Samsung	HPL-5025	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	HPN-4239	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	HPN5039	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	HP-P4271	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-42		
Samsung	HP-R5052	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	HP-S5053	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Samsung	LN22A450	LCD/Plasma	G-TOURLCDP-2023				
Samsung	LN32A550	LCD/Plasma	G-TOURLCDP-2632				
Samsung	LN32B360	LCD/Plasma	G-TOURLCDP-2632				
Samsung	LN37B550	LCD/Plasma	G-LCDCOVER-42				
Samsung	LN37B650	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Samsung	LN40A550	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	LN40A650	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	LN40A750	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	LN40B530	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	LN40B550	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	LN40B630	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	LN46A550	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Samsung	LN46A650	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Samsung	LN46A750	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	LN46B530	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Samsung	LN46B550	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	LN46B640	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Samsung	LN46B650	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Samsung	LN46B750	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	LN52A580	LCD/Plasma	G-TOURLCDLIFT65	G-LCDCOVER-65			
Samsung	LN52A750	LCD/Plasma	G-LCD-5052	G-TOURLCDLIFT52	G-TOURLCDLIFT65	G-LCDCOVER-52	G-LCDCOVER-65
Samsung	LN52A850	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Samsung	LN52B550	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Samsung	LN52B750	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Samsung	LN55B640	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Samsung	LN55C630	LCD/Plasma	G-LCD-5052	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	LN55C630K1F	LCD/Plasma	G-LCD-5052	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	LN55C650	LCD/Plasma	G-TOURLCDLIFT52				
Samsung	LN55296D	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			
Samsung	LN-S5296D	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			
Samsung	LN-T5265F	LCD/Plasma	G-TOURLCDLIFT65	G-LCDCOVER-65			
Samsung	LN-T5265FX	LCD/Plasma	G-TOURLCDLIFT65	G-LCDCOVER-65			
Samsung	LN-T5271F	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Samsung	P42H	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	P42HP	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	P50FP	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	P50H	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	P50HP	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	P63FP	LCD/Plasma	G-TOURLCDLIFT65	G-LCDCOVER-65			
Samsung	PDP-42HD	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Samsung	PDP-50VG	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Samsung	PN42B450	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Samsung	PN50B450	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Samsung	PN50B550	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Samsung	PN50B650	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Samsung	PN58B50T2	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Samsung	PPM-42M5S	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	PPM4253	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	PPM-50H2	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	PPM-50H3	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	PPM50M5H	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	SPD-42P1	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	SPD-50P2	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	SPK-4215	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	SPL-4225	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	SPN-4235	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Samsung	SPP4251	LCD/Plasma	G-TOURLCDLIFT52				
Samsung	UN46B6000	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Samsung	UN46B8000	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Samsung	UN55B7100	LCD/Plasma	G-LCD-5052	G-TOURLCDLIFT52	G-TOURLCDLIFT65	G-LCDCOVER-52	G-LCDCOVER-65
Samsung	UN55B8000	LCD/Plasma	G-LCD-5052	G-TOURLCDLIFT52	G-TOURLCDLIFT65	G-LCDCOVER-52	G-LCDCOVER-65
Samsung	UN55C6300	LCD/Plasma	G-LCD-5052	G-TOURLCDLIFT52	G-LCDCOVER-52		
Sanyo	DP50749	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sanyo	PDP-42H1AN	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sanyo	PDP-42WE	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52		
Sanyo	PLC-SU51	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sanyo	PLC-SW30	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sanyo	PLC-SW35	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sanyo	PLC-X25A	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sanyo	PLC-XU100	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sanyo	PLC-XU41	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sanyo	PLC-XU47	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sanyo	PLC-XU48	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sanyo	PLC-XU51	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sanyo	PLC-XU55A	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sanyo	PLC-XU56	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sanyo	PLC-XU58	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sanyo	PLC-XU73	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sanyo	PLC-XU83	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sanyo	PLC-XU86	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sanyo	PLCXW55	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sanyo	PLV-Z2	Projector	GAV-LTOFFICE				
Sceptre	X37SV-NAGA	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Selti	MPPD-5010A	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Sennheiser	ew112G2 ME2	Wireless System	GM-4WR	GM-7W-TSA	G-INEARSYSTEM		
Sennheiser	ew122G2	Wireless System	GM-4WR	GM-7W-TSA	G-INEARSYSTEM		
Sennheiser	EW135G2 E835	Wireless System	GM-1WP	GM-2W	GM-5W	GM-7W-TSA	G-INEARSYSTEM
Sennheiser	ew152G2	Wireless System	GM-4WR	GM-7W-TSA	G-INEARSYSTEM		
Sennheiser	ew172G2	Wireless System	GM-4WR	GM-7W-TSA	G-INEARSYSTEM		
Sennheiser	ew300IEM G2	Wireless System	G-INEARSYSTEM	GM-4WR	GM-7W-TSA		
Sennheiser	ew300IEM G3	Wireless System	G-INEARSYSTEM	GM-1WP	GM-2W	GM-7W-TSA	
Sennheiser	EW345G2	Wireless System	GM-4WR	GM-7W-TSA	G-INEARSYSTEM		
Sharp	46D64U	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Sharp	AQUOSLC-32D40U	LCD/Plasma	G-TOURLCDP-2632				
Sharp	AQUOSLC-52D62U	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sharp	AQUOSLC52D64U	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sharp	AQUOSLC-52D82U	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Sharp	LC-32SB24U	LCD/Plasma	G-TOURLCDP-2632				
Sharp	LC-37HV4U	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Sharp	LC-40E67U	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sharp	LC-42D64U	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sharp	LC-45GD4U	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Sharp	LC-45GD6U	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52			
Sharp	LC-46D64U	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Sharp	LC46D65U	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Sharp	LC46D85U	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Sharp	LC-52D62U	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sharp	LC-52D64U	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sharp	LC52D85U	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sharp	LC-52D92U	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sharp	LCC4655U	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Sharp	LC-M3700	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Sharp	LC-PD50U	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sharp	PG-A20X	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sharp	PG-B10S	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA			
Sharp	PG-MB60X	Projector	GAV-LTOFFICE				
Sharp	PN45SRU	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-42		
Sharp	PN465	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			
Sharp	PN465U	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			
Sharp	PN525U	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Sharp	PN655U	LCD/Plasma	G-TOURLCDLIFT65	G-LCDCOVER-65			
Sharp	PNG655	LCD/Plasma	G-TOURLCDLIFT65	G-LCDCOVER-65			
Sharp	PNS525	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Sharp	PNS655	LCD/Plasma	G-TOURLCDLIFT65	G-LCDCOVER-65			
Sharp	XR-30S	Projector	GAV-LTOFFICE				
Sharp	XR-30X	Projector	GAV-LTOFFICE				
Sharp	XR-40X	Projector	GAV-LTOFFICE				
Shure	200	Mixer	G-MIX-B0909				
Shure	M367	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Shure	P2T	Wireless System	G-INEARSYSTEM	GM-7W-TSA			
Shure	P4M	Wireless System	G-INEARSYSTEM	GM-7W-TSA			
Shure	P4T	Wireless System	G-INEARSYSTEM				
Shure	P9T	Wireless System	G-INEARSYSTEM	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Shure	PG1288/PG185	Wireless System	GM-4WR				
Shure	PG14/PG185	Wireless System	GM-4WR	GM-5W			
Shure	PG14/PG30	Wireless System	GM-4WR	GM-5W			
Shure	PG188/PG185	Wireless System	GM-4WR				
Shure	PG24/PG58	Wireless System	GM-4WR	GM-5W			
Shure	PG288/PG58	Wireless System	GM-4WR	GM-5W			
Shure	PGX14	Wireless System	GM-5W				
Shure	PGX14 Clip-on mic	Wireless System	GM-5W				
Shure	PGX24/Beta58	Wireless System	GM-5W				
Shure	PGX24/PG58	Wireless System	GM-5W				
Shure	PGX24/SM58	Wireless System	GM-5W				
Shure	PSM 200	Wireless System	G-INEARSYSTEM	GM-7W-TSA			
Shure	PSM 400	Wireless System	G-INEARSYSTEM				
Shure	PSM 900	Wireless System	G-INEARSYSTEM	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Shure	SCM262	Mixer	G-MIX-B0909	G-MIX-B1212			
Shure	SCM268	Mixer	G-MIX-B0909	G-MIX-B1212			
Shure	SLX	Wireless System	GM-1WEVAA	GM-1WP	GM-2W	GM-5W	G-INEARSYSTEM
Shure	SLX Beta58	Wireless System	GM-1WEVAA	GM-1WP	GM-2W	GM-5W	G-INEARSYSTEM
Shure	SLX SM58	Wireless System	GM-1WEVAA	GM-1WP	GM-2W	GM-5W	G-INEARSYSTEM
Shure	SLX Wireless Headset	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Shure	SLX Wireless System	Wireless System	GM-1WEVAA	GM-1WP	GM-2W	GM-5W	G-INEARSYSTEM
Shure	SLX1	Wireless System	GM-1W	GM-1WEVAA	GM-1WP	GM-2W	GM-5W
Shure	SLX24/Beta87A	Wireless System	GM-1WEVAA	GM-1WP	GM-2W	GM-5W	G-INEARSYSTEM
Shure	ULXP24BETA87A	Wireless System	GM-7W-TSA				
Shure	ULXS Series/Beta 87A J1	Wireless System	GM-7W-TSA				
Shure	ULXS Wireless Headset	Wireless System	GM-7W-TSA				
Shure	ULXS1493	Wireless System	GM-7W-TSA				
Shure	ULXS24BETA87A	Wireless System	GM-7W-TSA				
Simmons	DA200S	Speaker	GPA-777				
SMPProAudio	D14	Mixer	G-MIX-B1212				
SMPProAudio	D18	Mixer	G-MIX-B1212				
Softboard	502	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Softboard	503	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Softboard	512	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Softboard	513	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Softboard	522	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Softboard	532	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Soldano	SLO100 HEAD	Amp/Cabinet	G-901				
Sony	40V4100	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sony	AnycastAWS-G500	DigitalAudioGear	GX-1818-6-TSA				
Sony	BRAVIAKDL-46V2500	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sony	BraviaKDL-52S5100	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Sony	BRAVIAKDL-52XBR3	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Sony	BRAVIAKDL-V32XBR2	LCD/Plasma	G-TOURLCDP-2632				
Sony	DMXP01	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Sony	FWD40LX2F/B	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sony	FWD40LX2F/S	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sony	FWD50PX2/B	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sony	FWD-50PX2/B	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sony	FWD50PX2/S	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sony	FWD-50PX2/S	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sony	KDL-32L5000	LCD/Plasma	G-TOURLCDP-2632				
Sony	KDL-40D26	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Sony	KDL-40D27	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Sony	KDL-40D28	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Sony	KDL-40D30	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Sony	KDL-40S130	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Sony	KDL-40S28	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Sony	KDL-40S30	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Sony	KDL-40S504	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sony	KDL-40S5100	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sony	KDL-40T26	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Sony	KDL-40T28	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Sony	KDL-40T30	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Sony	KDL-40V4100	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sony	KDL40XBR6	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sony	KDL-46D27	LCD/Plasma	G-TOURLCDLIFT52				
Sony	KDL-46D28	LCD/Plasma	G-TOURLCDLIFT52				
Sony	KDL-46D30	LCD/Plasma	G-TOURLCDLIFT52				
Sony	KDL-46S2000	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sony	KDL-46S30	LCD/Plasma	G-TOURLCDLIFT52				
Sony	KDL-46S4100	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sony	KDL-46S5100	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sony	KDL-46T30	LCD/Plasma	G-TOURLCDLIFT52				
Sony	KDL-46V300A	LCD/Plasma	G-TOURLCDLIFT52				
Sony	KDL-46V4100	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Sony	KDL46V5100	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sony	KDL-46V5100	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sony	KDL-46XBR4	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sony	KDL-46Z4100/B	LCD/Plasma	G-LCD-4647	G-TOURLCD-3743T	G-TOURLCDLIFT52		
Sony	KDL-52S5100	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Sony	KDL-52V5100	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Sony	KDL-52W3000	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			
Sony	KDL-52XBR4	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Sony	KDL-52XBR5	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Sony	KDL-52XBR7	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			
Sony	KDL-52XBR9	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sony	KDL55EX500	LCD/Plasma	G-TOURLCDLIFT65	G-LCDCOVER-65			
Sony	KDL55HX701	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Sony	KDL-55XBR8	LCD/Plasma	G-TOURLCDLIFT65	G-LCDCOVER-65			
Sony	KE42TS2U	LCD/Plasma	G-LCD-4042	G-TOURLCDLIFT52			
Sony	KVL-40V300A	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52			
Sony	PFM-42B1	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sony	PFM-42B2H	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sony	PFM-42B2U	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sony	PFM-42V1	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sony	PFM-42V1-B	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sony	PFM-42X1	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sony	PFM500A2WU	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Sony	PFM500A3WU	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Sony	PFM-50C1	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sony	PFM510A2WU	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Sony	PWD-42LX1/B	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Sony	SRP-X700	DigitalAudioGear	GXDF-1919-7-TSA				
Sony	SWD-50PX1-B	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Sony	VPL-CS7	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sony	VPL-CX70	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sony	VPL-CX75	Projector	GAV-LT	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W	
Sony	VPL-CX80	Projector	GAV-LTOFFICE				
Sony	VPL-CX85	Projector	GAV-LTOFFICE				
Sony	VPL-DS100	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sony	VPL-ES2	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Sony	VPL-EX1	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Soundcraft	COMPACT10	Mixer	G-MIX-B1815	G-MIX-L1224	G-MIX12X24		
Soundcraft	COMPACT4	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Soundcraft	EFX12	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Soundcraft	EFX8	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Soundcraft	EPM12	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Soundcraft	EPM6	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Soundcraft	EPM8	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Soundcraft	FX16	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	FX16I1	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	FX8	Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Soundcraft	GB2-16	Mixer	GMIX-3828-8-TSA				
Soundcraft	GIGRAC1000	Mixer	GPA-720				
Soundcraft	GIGRAC1000ST	Mixer	GPA-720				
Soundcraft	GIGRAC600	Mixer	GPA-720				
Soundcraft	K1-16	Mixer	GMIX-3828-8-TSA				
Soundcraft	K1-24	Mixer	GMIX-3828-8-TSA				
Soundcraft	K1-8	Mixer	G-MIX-B2519	GMIX-2030-8-TSA	GMIX-2225-8-TSA	G-MIX20X25	
Soundcraft	LIVE8-16	Mixer	GMIX-3828-8-TSA				
Soundcraft	LX7	Mixer	G-MIX24X36				
Soundcraft	LX7II-16	Mixer	GMIX-2030-8-TSA	G-TOUR20X25			
Soundcraft	M12	Mixer	GMIX-2225-6-TSA	G-MIX20X25	GMC-2222		
Soundcraft	M4	Mixer	G-MIX-B2118	G-MIX-L1622	GMIX-1921-6-TSA	G-MIX19X21	G-MIX20X25
Soundcraft	M8	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21	GMC-2222
Soundcraft	MFx12	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	MFx12	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Soundcraft	MFx12	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	MFx12/2	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	MFx20	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25		
Soundcraft	MFx20/2	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Soundcraft	MFx18	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Soundcraft	MFx18/2	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Soundcraft	MPM12	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Soundcraft	MPM20	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X30		
Soundcraft	MPMi12/2	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	MPMi12-2	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	MPMi20/2	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Soundcraft	MPMi20-2	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Soundcraft	NOTEPAD	Mixer	G-MIX-B1212				
Soundcraft	NOTEPAD102	Mixer	G-MIX-B1212				
Soundcraft	NOTEPAD124	Mixer	G-MIX-B1212				
Soundcraft	NOTEPAD124FX	Mixer	G-MIX-B1212				
Soundcraft	POWERPAD	Mixer	G-MIX-B1212				
Soundcraft	SPIRIT1200	Mixer	GMIX-2030-8-TSA	G-TOUR20X25			
Soundcraft	SPIRITE12	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	SPIRITE6	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	SPIRITE8	Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	SPIRITES	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	SPIRITFX16	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	SPIRITFX8	Mixer	G-MIX-B1818	G-MIX-L1822	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Soundcraft	SPIRITM12	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21	GMC-2222
Soundcraft	SPIRITM12(W/SIDES)	Mixer	GMIX-2225-6-TSA	G-MIX20X25	GMC-2222		
Soundcraft	SPIRITM4	Mixer	G-MIX-B2118	G-MIX-L1622	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	SPIRITM8	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21	GMC-2222
Soundcraft	SPIRITM8(W/SIDES)	Mixer	GMIX-2225-6-TSA	G-MIX20X25	GMC-2222		
Soundcraft	SX12	Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Soundcraft	UREI1601	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
SoundDevices	442	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
SoundDevices	788T	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA			
Soundtech	1604	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Stanton	CM-203	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	GMC-2222	
Stanton	CM-205	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	GMC-2222	
Stanton	M-201	Mixer	G-MIX-B1212				
Stanton	M-202	Mixer	G-MIX-B1212				
Stanton	M-303	Mixer	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17		
Stanton	M-304	Mixer	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17		
Stanton	M-505	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Stanton	RM-3	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Stanton	RM-35	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Stanton	SA-12	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Stanton	SA-3	Mixer	G-MIX-B1515	G-TOUR12X17			
Stanton	SA-5	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Stanton	SA-8	Mixer	G-MIX-B1515	G-TOUR12X17			
Stanton	SCS3	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		
Stanton	SK-2	Mixer	G-MIX-B1515	G-MIX-L1618A	G-TOUR12X17		
Stanton	SK-2F	Mixer	G-MIX-B1515	G-MIX-L1618A	G-TOUR12X17		
Stanton	SK-5	Mixer	G-MIX-B1212				
Stanton	SK-6	Mixer	G-MIX-B1515	G-MIX-L1618A	G-TOUR12X17		
Stanton	SK-6F	Mixer	G-MIX-B1515	G-MIX-L1618A	G-TOUR12X17		
Stanton	SK-ONE	Mixer	G-MIX-B1515	GMIX-1015-4-TSA			
Stanton	SMX-201	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Stanton	SMX-211	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Stanton	SMX-301	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Stanton	SMX-401	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Stanton	SMX-501	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	
Studiologic	SL161PRO	Keyboard	GKB-49	GK-4212	GK-49	GKPE-49-TSA	
Studiologic	SL880PRO	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
StudioLogic	SL990XP	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
StudioLogic	VMK149	Keyboard	GK-49	GKC-1540			
StudioLogic	VMK188	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Studiomaster	C1	Mixer	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17		

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Studiomaster	CSX	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Studiomaster	PAX10	Speaker	GPA-600				
Studiomaster	PAX12	Speaker	GPA-777				
Studiomaster	VPX12	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
Studiomaster	VX12	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
Studiomaster	VX15	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
Studiomaster	VX15SUB	Speaker	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR	
Sunn	T50C	Amp/Cabinet	G-212A				
Superscope	PSD410	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Superscope	PSD450	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA	GXDF-1116-5-TSA		
Suzuki	SP-37	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Suzuki	SP-67	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
SVA	HD4208T11	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Sylvania	LC3205S9	LCD/Plasma	G-TOURLCDP-2632				
Tannoy	ELLIPSE212ID	Speaker	G-SUB2225-24BAG				
Tapco	6918S	Speaker	G-SUB2225-24BAG				
Tapco	BLEND6	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Tapco	MIX100	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Tapco	MIX120	Mixer	G-MIX-B1212				
Tapco	MIX220FX	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Tapco	MIX260FX	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Tapco	MIX50	Mixer	G-MIX-B0909				
Tapco	MIX60	Mixer	G-MIX-B1212				
Tascam	2488MK2	Mixer	G-MIX-B2519	G-MIX-L1822	G-MIX20X25	GMC-2222	
Tascam	2488NEO	Mixer	G-MIX-B2519	G-MIX-L1822	G-MIX20X25	GMC-2222	
Tascam	414MKII	DigitalAudioGear	G-MULTIFX-1510	G-TOURCARRYONFO	GX-1015-4-TSA	GXDF-1116-5-TSA	
Tascam	424MKII	DigitalAudioGear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	
Tascam	CD-DJ1	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA			
Tascam	DP-01	DigitalAudioGear	G-TOURCARRYONFO	GX-1818-6-TSA			
Tascam	DP-01FXCD	DigitalAudioGear	G-TOURCARRYONFO	GX-1818-6-TSA			
Tascam	DP-02	DigitalAudioGear	G-TOURCARRYONFO	GX-1818-6-TSA			
Tascam	DP-02CF	DigitalAudioGear	G-TOURCARRYONFO	GX-1818-6-TSA			
Tascam	DP-02FX/CD	DigitalAudioGear	G-TOURCARRYONFO	GX-1818-6-TSA			
Tascam	FIREONE	DigitalAudioGear	G-MULTIFX-1110	GX-1015-4-TSA			
Tascam	FW-1082	DigitalAudioGear	GX-1921-6-TSA	GXDF-1921-6-TSA			
Tascam	FW-1884	DigitalAudioGear	GX-2030-6-TSA	GX-2225-6-TSA	GXDF-2030-6-TSA	GXDF-2225-6-TSA	
Tascam	MD-301RMKII	DigitalAudioGear	G-TOURCARRYONFO				
Tascam	MF-P01	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Tascam	P11PRINTER	DigitalAudioGear	G-MULTIFX-1110				
Tascam	PORTA02	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Tascam	PORTA02MKII	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Tascam	US-428	DigitalAudioGear	G-TOURCARRYONFO	GX-1818-6-TSA			
Tatun	P42B5MT	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Tatun	P46T	LCD/Plasma	G-LCD-4647	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
TCElectronic	Classic450	DigitalAudioGear	GXDF-1116-5-TSA				
TCElectronic	DesktopKonnekt6	DigitalAudioGear	G-MULTIFX-1110				
TCElectronic	DesktopKonnekt6	DigitalAudioGear	G-MULTIFX-1110				
TCElectronic	G-SYSTEM	DigitalAudioGear	G-MULTIFX-2411	GXDF-1224-8			
TCElectronic	ImpactTwin	DigitalAudioGear	G-MULTIFX-1110				
TCElectronic	Konnekt24D	DigitalAudioGear	G-MULTIFX-1110				
TCElectronic	KonnektLive	DigitalAudioGear	G-MULTIFX-1110				
TCElectronic	NOVASYSTEM	DigitalAudioGear	G-MULTIFX-1110	GXDF-1116-5-TSA			
TCElectronic	RH450	DigitalAudioGear	GXDF-1116-5-TSA				
TCElectronic	Staccato'51	DigitalAudioGear	GXDF-1116-5-TSA				
TCHelicon	Voicelive2	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
TCHelicon	VoiceliveTouch	DigitalAudioGear	G-MULTIFX-1110				
Technics	KN7000	Keyboard	GKC-1648				
Technics	SH-EX1200	Mixer	G-MIX-B1515	G-MIX-L1618A	G-TOUR12X17		
Technics	SH-MZ1200	Mixer	G-MIX-B1515	G-MIX-L1618A	G-MIX17X18	G-TOUR12X17	
THD	2X12 CAB	Amp/Cabinet	G-212A				
Thomson	42HT93PU	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52			
Thomson	42WS90E3	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Thomson	42WS93E	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
TlAudio	FATTRACK	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
TlAudio	M416	Mixer	GMIX-3828-6-TSA				
ToftAudio	ATB16	Mixer	GMIX-3828-6-TSA	GMIX-3828-8-TSA	G-MIX24X36		
Topaz	S18-4	Mixer	G-MIX-B2118	G-MIX-L1618A	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Topaz	S28-4	Mixer	G-MIX24X36				
Toshiba	32AV502U	LCD/Plasma	G-TOURLCDP-2632				
Toshiba	37AV502R/U	LCD/Plasma	G-LCDCOVER-42				
Toshiba	40RV525U	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Toshiba	40XV645U	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Toshiba	42WP27B	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Toshiba	46XV540U	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Toshiba	46XV645U	LCD/Plasma	G-LCD-4647	G-TOURLCDLIFT52	G-LCDCOVER-52		
Toshiba	47ZV650U	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Toshiba	50HP66	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Toshiba	50WP27B	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Toshiba	52HL167	LCD/Plasma	G-TOURLCDLIFT52				
Toshiba	52LX177	LCD/Plasma	G-TOURLCDLIFT52	G-LCDCOVER-52			

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Toshiba	55UX600U	LCD/Plasma	G-TOURLCDLIFT65	G-TOURLCDP60	G-LCDCOVER-65		
Toshiba	TDP-S20U	Projector	GAV-LTOFFICE				
Toshiba	TDP-SW80U	Projector	GAV-LTOFFICE				
Turbosound	TXD115	Speaker	G-SUB2225-24BAG				
Turbosound	TXD-118	Speaker	G-SUB2225-24BAG				
Universal	42	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Universal	MVP2420	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Vestax	CDX-05	Mixer	G-MIX-B1212	G-MIX-B1515	GMIX-1015-4-TSA	G-TOUR12X17	
Vestax	PCV-275	Mixer	G-MIX-L1224	G-MIX12X24			
Vestax	PMC-007	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Vestax	PMC-05PROIII	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Vestax	PMC-05PROSL	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Vestax	PMC-07	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Vestax	PMC-37PRO	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Vestax	VCM-600	DigitalAudioGear	G-TOURCARRYONFO				
Vestax	VMC-002	Mixer	G-MIX-B1212				
Vestax	VMC-185	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR12X17
Vestex	PCV150	Mixer	G-MIX-L1224				
Vestex	PMC06PROA	Mixer	G-MIX-B1515				
Vestex	PMC07PRO	Mixer	G-MIX-B1515	G-MIX-L1618A	GMIX-1818-6-TSA	G-TOUR12X17	GMC-2222
Viewsonic	CINE1000	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Viewsonic	N3751W	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Viewsonic	N4290P	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Viewsonic	N4785P	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Viewsonic	PJ400	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Viewsonic	PJ402D	Projector	GAV-LTOFFICE				
Viewsonic	PJ452	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Viewsonic	PJ458D	Projector	GAV-LTOFFICE				
Viewsonic	PJ506D	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Viewsonic	PJ558D	Projector	GAV-LTOFFICE				
Viewsonic	PJ656	Projector	GAV-LTOFFICE				
Viewsonic	PJ658	Projector	GAV-LTOFFICE				
Viewsonic	PJ766D	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Viewsonic	PJ862	Projector	GAV-LTOFFICE				
Viewsonic	VPW-425	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Viewsonic	VPW-4255	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Viewsonic	VPW-450WD	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Viewsonic	VPW-505	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Vivitek	H1082	Projector	GAV-LTOFFICE				
Vivitek	D825MX	Projector	GAV-LTOFFICE	GAV-LTOFFICETSA	GAV-LTOFFICE-W		
Vizio	P50HDM	LCD/Plasma	G-TOURLCDLIFT52				
Vizio	VF550M	LCD/Plasma	G-TOURLCDLIFT52				
VoodooLab	GroundControlPro	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO	GX-1818-6-TSA		
Vox	AC100CPH	Amp/Cabinet	G-901				
Vox	AC15H1TV LTD	Amp/Cabinet	G-112-ROTO				
Vox	AC15H1TVL	Amp/Cabinet	G-112-ROTO				
Vox	AC30BM	Amp/Cabinet	G-212A				
Vox	AC30CC1	Amp/Cabinet	G-212A				
Vox	AC30CC2	Amp/Cabinet	G-212A				
Vox	AC30CC2X	Amp/Cabinet	G-212A				
Vox	AC30CCH	Amp/Cabinet	G-901				
Vox	AC50CP2	Amp/Cabinet	G-212A				
Vox	AD100VT	Amp/Cabinet	G-212A				
Vox	AD120VTH	Amp/Cabinet	G-212A				
Vox	AD120VTX NEODOG	Amp/Cabinet	G-212A				
Vox	AD212	Amp/Cabinet	G-212A				
Vox	AD50VT	Amp/Cabinet	G-112-ROTO	G-212-ROTO			
Vox	AD60VTX NEODOG	Amp/Cabinet	G-112-ROTO	G-212-ROTO			
Vox	DA20	Amp/Cabinet	G-112-ROTO				
Vox	TONELAB	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA	GXDF-1116-5-TSA		
Vox	TONELABLE	DigitalAudioGear	G-MULTIFX-2411				
Vox	V112HTV	Amp/Cabinet	G-112-ROTO				
Vox	V212BN	Amp/Cabinet	G-212A				
Vox	V212BNX	Amp/Cabinet	G-212A				
Waldorf	BLOFELD	Keyboard	G-MEDIAPROBP				
Westinghouse	LTV-20V4	LCD/Plasma	G-TOURLCDP-2023				
Westinghouse	LTV-32W4	LCD/Plasma	G-TOURLCDP-2632				
Westinghouse	TX-52F480S	LCD/Plasma	G-TOURLCDLIFT52				
Westinghouse	VM-47F140S	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Wharfedale	R-1604FX	DigitalAudioGear	GX-1818-6-TSA				
Wharfedale	R-2004FX	DigitalAudioGear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	
Wharfedale	SW300	Speaker	GPA-777				
Wharfedale	SW380	Speaker	G-SUB2225-24BAG				
Wharfedale	TITAN12	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Williams	ENCORE	Keyboard	GKPE-88SLXL-TSA	GKPE-88-TSA			
Yamaha	01V	Mixer	G-MIX-B2519	G-MIX-L1822	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Yamaha	01X	DigitalAudioGear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	
Yamaha	9000Pro	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Yamaha	A12M	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Yamaha	A15W	Speaker	G-SUB2225-24BAG				

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Yamaha	AW1600	DigitalAudioGear	GXDF-1919-7-TSA				
Yamaha	AW16G	DigitalAudioGear	GX-1818-6-TSA				
Yamaha	AW2400	Mixer	G-MIX-B2123	GMIX-2030-6-TSA	GMIX-2225-6-TSA	G-MIX20X25	GMC-2222
Yamaha	AW4416HDCD	DigitalAudioGear	GX-2030-6-TSA	GX-2225-6-TSA	GXDF-2030-6-TSA	GXDF-2225-6-TSA	
Yamaha	BR10	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Yamaha	BR12	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Yamaha	BR12M	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Yamaha	C112V	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
Yamaha	CM10V	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Yamaha	CM12V	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
Yamaha	CP-1	Keyboard	GKC-1648				
Yamaha	CP300	Keyboard	GKC-1648				
Yamaha	CP33	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Yamaha	CP-5	Keyboard	GKC-1648				
Yamaha	CP-50	Keyboard	GKPE-88-TSA				
Yamaha	CSX1	Keyboard	GK-4212				
Yamaha	DG-60	Amp/Cabinet	G-112-ROTO				
Yamaha	DG-80	Amp/Cabinet	G-112-ROTO				
Yamaha	DGX203	Keyboard	GKB-76	GK-76	G-TOUR76	GKC-1648	
Yamaha	DGX230	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Yamaha	DGX305	Keyboard	GKC-1648				
Yamaha	DGX505	Keyboard	GKC-1648				
Yamaha	DGX620	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR88	GKC-1648
Yamaha	DJX203	Keyboard	GKB-61	GKC-1540			
Yamaha	DSR112	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
Yamaha	DSR118W	Speaker	G-SUB2225-24BAG				
Yamaha	DSR215	Speaker	G-SUB2225-24BAG				
Yamaha	DTX-MULTI12	DigitalAudioGear	GX-1818-6-TSA				
Yamaha	EMX2000	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	EMX2125	Mixer	GPA-720				
Yamaha	EMX3000	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	EMX3125	Mixer	GPA-720				
Yamaha	EMX3125C	Mixer	GPA-720				
Yamaha	EMX5000	Mixer	G-MIX-B2519	GMIX-2030-8-TSA	GMIX-2225-8-TSA	G-MIX20X25	
Yamaha	EMX5000-12	Mixer	G-MIX-B2519	GMIX-2030-8-TSA	GMIX-2225-8-TSA	G-MIX20X25	
Yamaha	EMX5000-20	Mixer	GMIX-3828-8-TSA				
Yamaha	EMX5014C	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-8-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	EMX5016CF	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-8-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	EMX5125	Mixer	GPA-720				
Yamaha	EMX5125C	Mixer	GPA-720				
Yamaha	EMX620	Mixer	GPA-720				
Yamaha	EMX62M	Mixer	GPA-720				
Yamaha	EMX640	Mixer	GPA-720				
Yamaha	EMX66M	Mixer	GPA-720				
Yamaha	EMX685	Mixer	GPA-720				
Yamaha	EMX860ST	Mixer	GPA-720				
Yamaha	EMX885	Mixer	GPA-720				
Yamaha	EZ150	Keyboard	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540	
Yamaha	EZ200	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	EZ250I	Keyboard	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540	
Yamaha	GF12/12	Mixer	GMIX-2030-8-TSA	GMIX-2225-8-TSA	G-MIX20X25	G-TOUR20X30	
Yamaha	GF16/12	Mixer	GMIX-2030-8-TSA	G-MIX24X36	G-TOUR20X25	G-TOUR20X30	
Yamaha	GF24/12	Mixer	G-MIX22X46				
Yamaha	KX25	Keyboard	GK-2110				
Yamaha	KX49	Keyboard	GKB-49	GK-49	GKPE-49-TSA		
Yamaha	KX61	Keyboard	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540	
Yamaha	KX8	Keyboard	GKB-88	GKPE-88-TSA	G-TOUR88	GKC-1648	
Yamaha	MD4S	DigitalAudioGear	GX-1818-6-TSA	GX-1921-6-TSA	GXDF-1919-7-TSA	GXDF-1921-6-TSA	
Yamaha	MD8	DigitalAudioGear	GX-1921-6-TSA	GXDF-1921-6-TSA			
Yamaha	MG10/2	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Yamaha	MG102C	Mixer	G-MIX-B1212				
Yamaha	MG12/4	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Yamaha	MG12/4FX	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Yamaha	MG124C	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Yamaha	MG124CX	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Yamaha	MG16/4	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Yamaha	MG16/6FX	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Yamaha	MG166C	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21	GMC-2222
Yamaha	MG166CX	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21	GMC-2222
Yamaha	MG206C	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21	GMC-2222
Yamaha	MG206C-USB	Mixer	G-MIX-B2020	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21	GMC-2222
Yamaha	MG24/14	Mixer	GMIX-3828-6-TSA	G-MIX24X36			
Yamaha	MG24/14FX	Mixer	GMIX-3828-6-TSA	G-MIX24X36	G-TOUR24X36		
Yamaha	MG32/14FX	Mixer	G-MIX22X46				
Yamaha	MG8/2FX	Mixer	G-MIX-B1212	GMIX-1015-4-TSA			
Yamaha	MG82CX	Mixer	G-MIX-B1212				
Yamaha	MM1242	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Yamaha	MM1402	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Yamaha	MM6	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	MM8	Keyboard	GKB-88	GKPE-88-TSA	G-TOUR88	GKC-1648	

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Yamaha	MO6	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	MO8	Keyboard	GKPE-88-TSA	G-TOUR88	GKC-1648		
Yamaha	MOTIF6	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	MOTIF8	Keyboard	GKPE-88-TSA	G-TOUR88	GKC-1648		
Yamaha	MOTIFES6	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	MOTIFES7	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Yamaha	MOTIFES8	Keyboard	GKPE-88-TSA	G-TOUR88	GKC-1648		
Yamaha	MOTIFXF6	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	MOTIFXF7	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Yamaha	MOTIFXF8	Keyboard	GKPE-88-TSA	G-TOUR88	GKC-1648		
Yamaha	MOTIFXS6	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	MOTIFXS7	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Yamaha	MOTIFXS8	Keyboard	GKPE-88-TSA	G-TOUR88	GKC-1648		
Yamaha	MSR250	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Yamaha	MSR400	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X15-SPKR
Yamaha	MSR800W	Speaker	G-SUB2225-24BAG				
Yamaha	MV1602	Mixer	GPA-720				
Yamaha	MW10USB	Mixer	G-MIX-B1212				
Yamaha	MW12USB	Mixer	G-MIX-B1815	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	GMC-2222
Yamaha	MX12/4	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Yamaha	MX12/6	Mixer	G-MIX-B1818	G-MIX-L1618A	GMIX-1818-6-TSA	G-MIX17X18	G-TOUR19X21
Yamaha	MX20/6	Mixer	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25	G-TOUR20X30
Yamaha	MX200-12	Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Yamaha	MX200-16	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-TOUR20X25		
Yamaha	MX200-24	Mixer	G-MIX22X46	GMC-4221			
Yamaha	MX200-8	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	MX400-12	Mixer	GMIX-3828-8-TSA				
Yamaha	MX400-16	Mixer	GMIX-3828-8-TSA				
Yamaha	N12	Mixer	G-MIX-B2123	GMIX-2225-6-TSA			
Yamaha	N8	Mixer	G-MIX-B2118	G-MIX-L1822	GMIX-1921-6-TSA	G-MIX19X21	G-TOUR19X21
Yamaha	NP-V80	Keyboard	GKB-76	GK-76	GKPE-76-TSA	GKPE-88-TSA	G-TOUR76
Yamaha	NP-V80	Keyboard	GKB-76	GK-76	GKPE-76-TSA	GKPE-88-TSA	G-TOUR76
Yamaha	O1V96	Mixer	G-MIX-B2519	G-MIX-L1822	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Yamaha	O1V96VCM	Mixer	G-MIX-B2519	G-MIX-L1822	GMIX-2030-6-TSA	G-MIX20X25	GMC-2222
Yamaha	P120	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Yamaha	P120S	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Yamaha	P140	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Yamaha	P-150	Keyboard	GKB-88	GKPE-88-TSA	G-TOUR88	GKC-1648	
Yamaha	P-155	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR88	GKC-1648
Yamaha	P200	Keyboard	GKPE-88-TSA	G-TOUR88	GKC-1648		
Yamaha	P250	Keyboard	GKC-1648				
Yamaha	P60	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Yamaha	P60S	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Yamaha	P-70	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	GKPE-88-TSA	G-TOUR88SLIM
Yamaha	P85	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
Yamaha	P90	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
Yamaha	P95	Keyboard	GKB-88SLIM	GK-88SLIM	GKPE-88SLIM-TSA	G-TOUR88SLIM	
Yamaha	PDM-1	LCD/Plasma	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52		
Yamaha	PF15	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR88	GKC-1648
Yamaha	PF500	Keyboard	GKC-1648				
Yamaha	PSR-172	Keyboard	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540	
Yamaha	PSR175	Keyboard	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540	
Yamaha	PSR-273	Keyboard	GK-49	G-TOUR61	GKC-1540		
Yamaha	PSR-293	Keyboard	GKB-61	GKPE-61-TSA	G-TOUR61	GKC-1540	
Yamaha	PSR-3000	Keyboard	GKB-61	GK-61	GKC-1540		
Yamaha	PSR-E203	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	PSR-E213	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	PSR-E223	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	PSR-E303	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	PSR-E313	Keyboard	GK-49	G-TOUR61	GKC-1540		
Yamaha	PSR-E323	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	PSR-E403	Keyboard	GKB-61	GKPE-61-TSA	G-TOUR61	GKC-1540	
Yamaha	PSR-E413	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	PSRE423	Keyboard	GKB-61	GKPE-61-TSA	G-TOUR61	GKC-1540	
Yamaha	PSR-OR700	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	PSR-S500	Keyboard	GKB-61	GKPE-61-TSA	G-TOUR61	GKC-1540	
Yamaha	PSR-S550BK	Keyboard	GKB-61	GKPE-61-TSA	G-TOUR61	GKC-1540	
Yamaha	PSR-S700	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	PSR-S900	Keyboard	GKB-61	GK-61	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	RADIAS-R	Mixer	G-MIX-L1224	G-MIX12X24			
Yamaha	S03	Keyboard	GK-4212	GKC-1540			
Yamaha	S08	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR88	GKC-1648
Yamaha	S112V	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
Yamaha	S70XS	Keyboard	GKC-1648				
Yamaha	S90	Keyboard	GKPE-88-TSA	G-TOUR88	GKC-1648		
Yamaha	S90ES	Keyboard	GKPE-88-TSA	G-TOUR88	GKC-1648		
Yamaha	S90XS	Keyboard	GKC-1648				
Yamaha	SM12V	Speaker	GPA-SCVR450-515	GPA-700A	GPA-777	GPA-1500	G-TOUR2X12-SPKR
Yamaha	STAGEPAS250M	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	
Yamaha	STAGEPAS500	Speaker	GPA-SCVR450-515	GPA-600	GPA-777	G-TOUR2X12-SPKR	

Manufacturer	Model	Type	Fits (1)	Fits (2)	Fits (3)	Fits (4)	Fits (5)
Yamaha	TYROS	Keyboard	GKPE-76D-TSA	GKC-1648			
Yamaha	TYROS2	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Yamaha	TYROS3	Keyboard	GKB-76	GK-76	G-TOUR76	GKC-1648	
Yamaha	YPG225	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Yamaha	YPG-235	Keyboard	GKB-76	GK-76	GKPE-76-TSA	G-TOUR76	GKC-1648
Yamaha	YPG525	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR88	GKC-1648
Yamaha	YPG625	Keyboard	GKB-88	GK-88	GKPE-88-TSA	G-TOUR88	GKC-1648
Yamaha	YPT-200	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	YPT-220	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	YPT-310	Keyboard	GKB-61	GK-49	GKPE-61-TSA	G-TOUR61	GKC-1540
Yamaha	YPT-400	Keyboard	GKB-61	GKPE-61-TSA	G-TOUR61	GKC-1540	
Yorkville	AP812	Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X25	G-TOUR20X25
Yorkville	AP818	Mixer	G-MIX-B2519	G-MIX-L1926	GMIX-2030-6-TSA	G-MIX20X25	G-TOUR20X25
Yorkville	MAX16	Mixer	GMIX-2030-6-TSA	G-MIX20X30	G-MIX24X36	G-TOUR20X25	G-TOUR20X30
Yorkville	MAX22	Mixer	G-MIX24X36	GMC-4221			
Zenith	P42W22B	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Zenith	P42W24B/P	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Zenith	P42W34/34H	LCD/Plasma	G-LCD-4042	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42	
Zenith	P42W46X	LCD/Plasma	G-TOURLCD-3743T	G-TOURLCDLIFT52	G-LCDCOVER-42		
Zenith	P50W28B	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Zenith	P50W38/38H	LCD/Plasma	G-LCD-5052	G-TOURLCD5055	G-TOURLCDLIFT52	G-LCDCOVER-52	
Zoom	G2	DigitalAudioGear	G-MULTIFX-1110				
Zoom	G7	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Zoom	G7.1UT	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO			
Zoom	G92TT	DigitalAudioGear	G-MULTIFX-2411				
Zoom	HD-16	Mixer	G-MIX-B2118	G-MIX-L1618A	G-MIX19X21	GMC-2222	
Zoom	MRS1044	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO	GX-1818-6-TSA		
Zoom	MRS1608CD	DigitalAudioGear	GX-1921-6-TSA	GX-2225-6-TSA	GXDF-1921-6-TSA	GXDF-2225-6-TSA	
Zoom	MRS4B	DigitalAudioGear	G-MULTIFX-1110				
Zoom	MRS-8	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA			
Zoom	MRS-8	DigitalAudioGear	G-MULTIFX-1510	GX-1015-4-TSA			
Zoom	MRS802BCD	DigitalAudioGear	G-MULTIFX-2411	G-TOURCARRYONFO	GX-1818-6-TSA		
Zoom	R16	DigitalAudioGear	G-MULTIFX-1510	G-TOURCARRYONFO	GX-1015-4-TSA	GXDF-1116-5-TSA	
Zoom	R24	DigitalAudioGear	G-MULTIFX-1510	G-TOURCARRYONFO	GX-1015-4-TSA	GXDF-1116-5-TSA	
Zoom	RT223	DigitalAudioGear	G-BROADCASTER	G-MULTIFX-1110			
Zoom	SB246	DigitalAudioGear	G-BROADCASTER	G-MULTIFX-1110			